

MOCET

IP3022 SOHO IP Deskphone User Guide



Copyright © 2014. All Rights Reserved.
Ver: 2.0 D/C: 103-1225

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CE Declaration of Conformity

This equipment complies with the requirements relating to electromagnetic compatibility, EN55022 class B for ITE and EN 50082-1. This meets the essential protection requirements of the European Council Directive 89/336/EEC on the approximation of the laws of the Member States relating to electromagnetic compatibility.

C-Tick Declaration of Conformity

This equipment passed tests performed according to AS/NZS CISPR 22:2009/A1:2010 Class B and AS/NZS 60950.1:2011 +A1 at Sporton International Inc. Lab.

Environment

The phone you have purchased, as well as any used batteries must not be disposed of with household waste. You should return these to your distributor if they are to replace or dispose of them in an approved recycling centre.

Trademarks

All company, brand and product names, like Metaswitch™, Broadsoft™, Freeswitch™, 3CX™ and Asterisk™ are registered trademarks of their respective owners.

WARNING!



- 1 Read these installation instructions carefully before connecting the IP phone to its power.
- 2 To reduce the risk of electric shock, do not remove the cover from the IP phone or attempt to dismantle it. Opening or removing covers may expose you to dangerous voltage levels. Equally, incorrect reassembly could cause electric shock on re-use of the appliance.

- 3 Do not expose the IP Phone to Fire, direct sunlight or excessive heat.
- 4 Do not expose the IP Phone to rain or moisture and do not allow it to come into contact with water.
- 5 Do not install the IP phone in an environment likely to present a THREAT OF IMPACT.
- 6 You may clean the IP phone using a fine damp cloth. Never use solvents (such as trichloroethylene or acetone), which may damage the phone's plastic surface and LCD screen. Never spray the phone with any cleaning product whatsoever.
- 7 Take care not to scratch the LCD screen.
- 8 The IP phone is designed to work in temperatures from 5°C to 40°C.
- 9 The IP phone must be installed at least 1 meter from radio frequency equipment, such as TVs, radios, hi-fi or video equipment (which radiate electromagnetic fields).
- 10 Do not connect the LAN/PC port to any network other than an Ethernet network.
- 11 Do not attempt to upgrade your IP phone in an unstable power environment. This could cause unexpected issues.
- 12 Do not work on the system or connect or disconnect cables during lightning storms.
- 13 Children don't recognize the risks of electrical appliances. Therefore use or keep the phone only under supervision of adults or out of the reach from children.
- 14 No repair can be performed by the end user, if you experience trouble with this equipment, for repair or warranty information, please contact your supplier.

Table of Content

About this Guide	7
1. Introduction	9
1.1. Phone Features and Specifications	10
1.2. Requirements	10
1.3. Installation and Setup	10
1.3.1. <i>Attaching the Stand to the Phone</i>	11
1.3.2. <i>Detaching the Stand from the Phone</i>	11
1.3.3. <i>Installation Combination Table</i>	12
1.3.4. <i>Connect the Handset to the Phone</i>	13
1.3.5. <i>Connect the Ethernet Cables</i>	13
1.4. Appearance and Function Description	14
1.5. Port Functions	17
1.6. LED Functions	19
1.7. LCD Screen Indicators	20
1.8. Phone Status Icons	21
2. Getting Started	22
2.1. Customizing Your Phone from Menu	22
2.2. Configuring Basic Settings	22
2.2.1. <i>Volume Setting</i>	22
2.2.2. <i>LCD Contrast</i>	23
2.2.3. <i>Language</i>	23
2.2.4. <i>Ring Setting</i>	24
2.2.5. <i>Local Voicemail</i>	24
2.2.6. <i>Headset Setting</i>	24
2.3. Configuring Call Settings	25
2.3.1. <i>Do Not Disturb (DND)</i>	25
2.3.2. <i>Auto Answer</i>	25
2.3.3. <i>Call Forward</i>	26
2.3.4. <i>Call Waiting</i>	26
2.3.5. <i>Call Completion</i>	26
2.3.6. <i>Auto Redial</i>	27
2.3.7. <i>Hot Line</i>	27
2.3.8. <i>Broadsoft Menu</i>	28
2.4. Managing Contacts	28
2.4.1. <i>Adding Contacts</i>	28

2.4.2.	<i>Editing Contacts</i>	29
2.4.3.	<i>Deleting Contacts</i>	29
2.4.4.	<i>Managing Blacklist</i>	30
2.4.5.	<i>Managing Speed Dial List</i>	30
2.4.6.	<i>Placing a Call to a Contact</i>	31
2.5.	Managing Call Logs	31
2.6.	Locking Your Phone Keypad.....	32
2.7.	Configuring Programmable Keys	33
2.7.1.	<i>Do Not Disturb</i>	34
2.7.2.	<i>Lock IP-Phone</i>	34
2.7.3.	<i>Speed Dial (Abbreviated Codes)</i>	34
2.7.4.	<i>Busy Forward</i>	34
2.7.5.	<i>Always Forward</i>	35
2.7.6.	<i>No Answer Forward</i>	35
2.7.7.	<i>DND Forward</i>	35
2.7.8.	<i>Auto Answer</i>	35
2.7.9.	<i>Caller Blocking</i>	35
2.7.10.	<i>BLF</i>	36
2.7.11.	<i>Call Park</i>	36
2.7.12.	<i>SLA</i>	37
2.7.13.	<i>Asterisk Parking Number</i>	37
2.7.14.	<i>Asterisk Parking Slot</i>	38
2.7.15.	<i>Intercom</i>	38
2.7.16.	<i>Feature Code</i>	38
2.7.17.	<i>DTMF</i>	39
2.7.18.	<i>Call Trace</i>	39
2.7.19.	<i>Emergency Call</i>	39
2.7.20.	<i>Broadsoft BLF</i>	40
2.7.21.	<i>Multicast Group</i>	40
2.7.22.	<i>Call Return</i>	41
2.7.23.	<i>LDAP</i>	41
2.7.24.	<i>Hoteling Guest</i>	41
2.7.25.	<i>ACD(Automatic Call Distribution)</i>	41
2.7.26.	<i>Record</i>	42
2.7.27.	<i>Dial Prefix</i>	42
2.7.28.	<i>Hot Desking</i>	42
2.8.	Configuring Extended Dial Modules (IP-EDMX).....	43
2.9.	Viewing Your Phone's Information	43
2.10.	Resetting Your Phone	43

3. Using Basic Features	44
3.1. Common Terms	44
3.1.1. <i>Lines</i>	44
3.1.2. <i>Calls</i>	44
3.1.3. <i>Registration</i>	45
3.1.4. <i>Caller ID</i>	45
3.2. Installing Your IP Phone	45
3.3. Configuring Your IP Phone for Service	46
3.4. Line Selection	46
3.5. Placing a Call	46
3.6. Adjusting Call Volume	47
3.7. Canceling a Call.....	47
3.8. Answering a Call	48
3.9. Rejecting a Call.....	49
3.10. Muting a Call Ringtone.....	49
3.11. Ending and Holding and Resuming a Call	49
3.12. Muting and Un-muting a Call.....	50
3.13. Redialing a Number.....	50
3.14. Setting up a Conference Call.....	50
3.15. Transferring a Call.....	51
3.15.1. <i>Blind Transfer</i>	51
3.15.2. <i>Semi-Attended Transfer</i>	51
3.15.3. <i>Attended Transfer</i>	52
3.16. Forwarding a Call	52
3.17. Using Voice Mail.....	52
3.18. Placing a Speed Dial Call.....	53
3.19. Using Multiple Lines	54
3.20. Using Multiple Calls	55
3.21. Using Text Message	56
3.22. Using XML Browser	57
4. Using Web Configuration.....	58
4.1. Login Web UI	58
4.2. Changing the User's Password.....	58
4.3. Viewing Phone Information on Web User Interface	59
5. Phone Firmware Upgrade	60
6. Troubleshooting.....	61

7. Glossary 62

7.1. Acronyms.....62

7.2. Terminology.....63

About this Guide

This guide explains how to use the basic features of your new IP3022 SOHO IP phone. Not all features listed are available by default. Contact your system or network administrator to find out which features and services are available to you on your system.

 
Your System Administrator has the ability to customize some features on this phone. For information on more advanced settings and configurations, administrators should refer to the IP3022 SOHO IP Deskphone Administrators' Guide.

1. Introduction

The MOCET IP3022 SOHO IP Deskphone is an easy-to-use high quality desk phone with many advanced features including support for secure calling with trusted layer security (TLS) and Secure Real-time Transport Protocol (SRTP), a built-in IP Security (IPSEC) virtual private network (VPN) client, and instant messaging capabilities. The phone supports up to three simultaneous lines and can be positioned in two tilt angles and has a wall mount option, and has a built-in two port 10/100 Ethernet switch with automatic support for power over Ethernet (PoE). The phone has 8 programable buttons and can be configured through the simple built in menus displayed on the green-yellow backlit LCD or from the phone's web user interface. The phone can be automatically provisioned from a local or Internet based server using the built-in MOCET auto-provisioning system and management protocols.

The phone supports many advanced features including 3-way on-phone conferencing, can transfer and receive calls using industry-standard SIP protocols, and can provide built-in music-on-hold (MoH) over IP network. The phone is interoperable with a wide range of SIP services and servers including those based on Metaswitch™, Broadsoft™, Freeswitch™ and Asterisk™. Therefore, the phone can be deployed and used anywhere there is a suitable local area network (LAN) with Internet access and a local or remotely hosted SIP server. Since it is a stand-alone and “always-on” device, it does not require connection to a computer for it to work.

In addition, the phone has a graphic LCD display to show all calls in progress at once and supports HD audio through the use of the G.722 wideband codec. EHS port and an Extended Dial Module port are also supported by the phone which is more powerful and professional to meet the demands of office users.

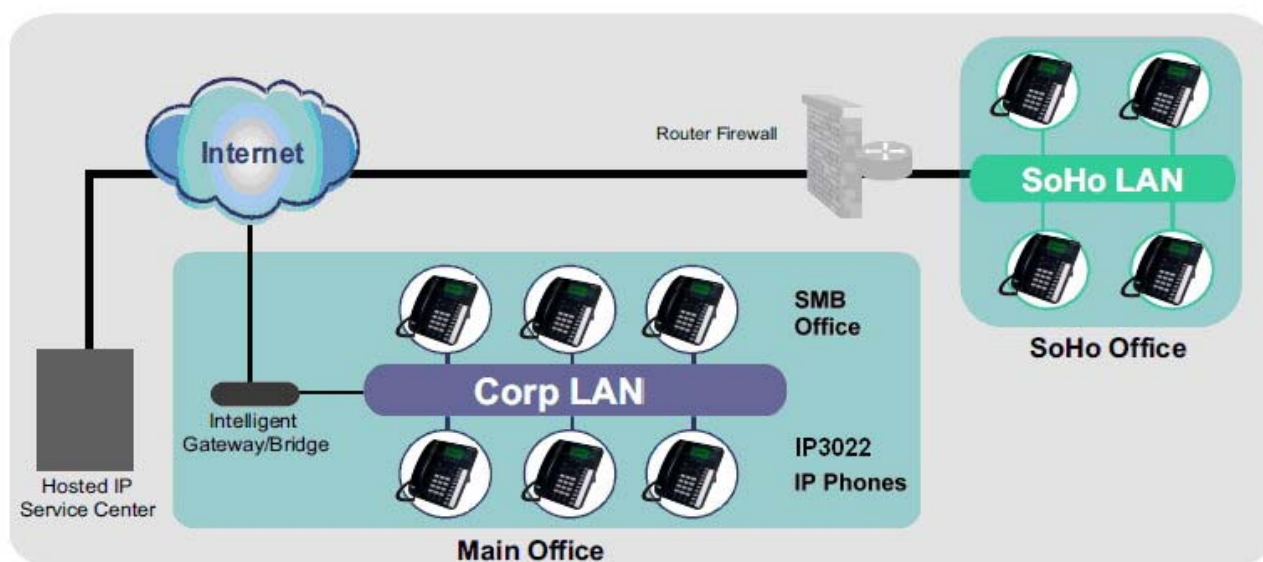

1.1. Phone Features and Specifications

- Complete VoIP and networking protocol support
- Rich supplementary call services and phone features
- 3 SIP Lines with 6 call appearances
- Graphic 128x64 pixels LCD display with backlight
- HD audio chamber design in handset and speakerphone
- 3-way on-phone conferencing
- Independent 4 soft keys for easy menu operation
- 8 programmable keys
- Support headset port and EHS port for Wireless BT headset
- Built-in two ports 10/100 Ethernet switch with class1 power over Ethernet (PoE)
- Extensive IP networking support including VLAN, VPN, OpenVPN, IPv4 and IPv6
- Auto-provisioning and firmware upgrade
- Web management and LCD configuration
- Asterisk, 3CX, Freeswitch, Metaswitch and Broadsoft interoperability
- Option items: power adapter, wall-mount kit, electronic hook switch (IP-EHS) for wireless BT headset, and external dial module (IP-EDMX)


1.2. Requirements

The phone requires the following environments:

- Compatible SIP-based IP PBX system or Internet-based hosted SIP service account
- Ethernet LAN (10/100 Base-T)


1.3. Installation and Setup

The phone can support two different tilt angles of 49° and 30° (see below).

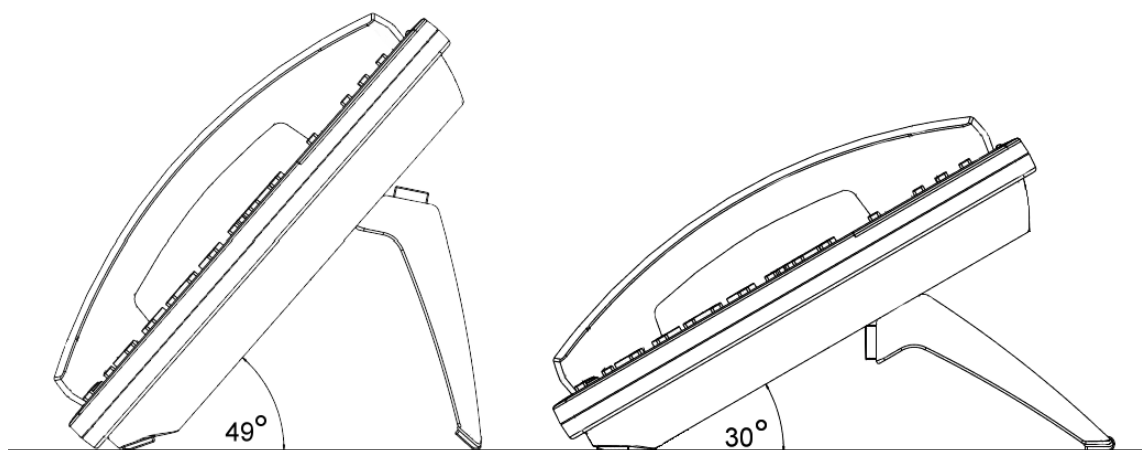

1.3.1. Attaching the Stand to the Phone


After unpacking the box, attach the stand to the phone first. Below this paragraph we illustrate an example below of 49° angle installation with the stand. There are two sets of “bolt” on the top of the stand (named A and B) and there are two sets of notches on the back of the phone. See the illustration below.

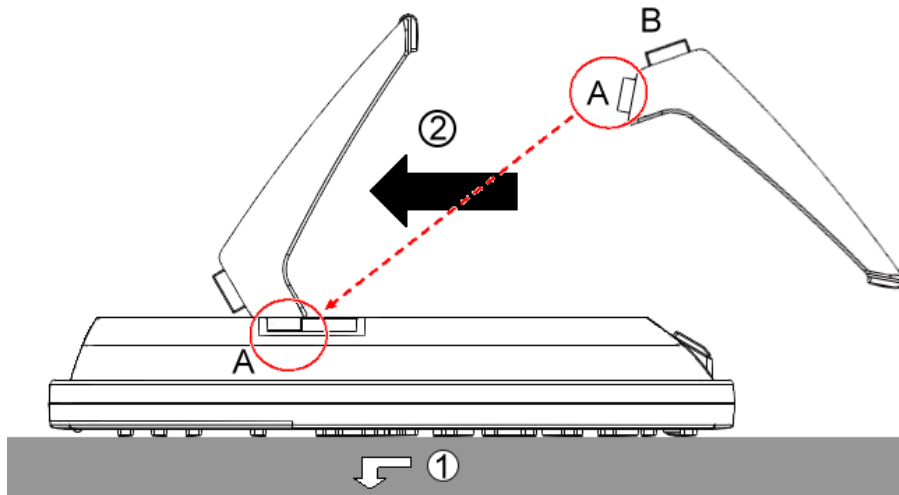

The procedures for attaching the stand to the phone are as follows:

Step ①: Place the main body of the phone face down on your lap or a firm sofa.


Step ②: Slide the “A” bolt into the notch hole.

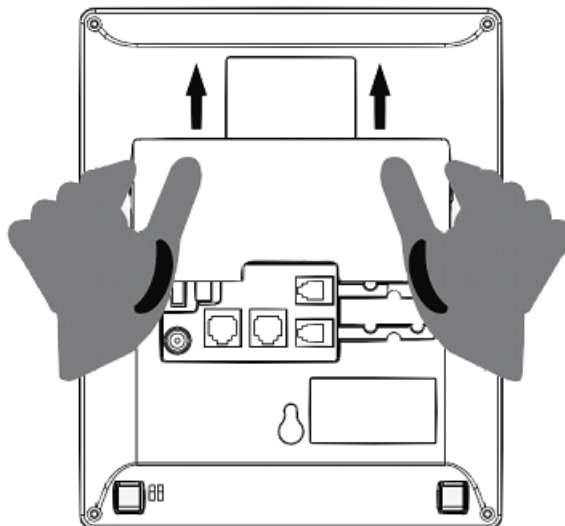


For other stand angle, such as 30°, please change the bolt “B” to slide into the notch hole.

1.3.2. Detaching the Stand from the Phone




To remove the stand from the phone, follow the procedures below (we are using a 49° stand as an example):

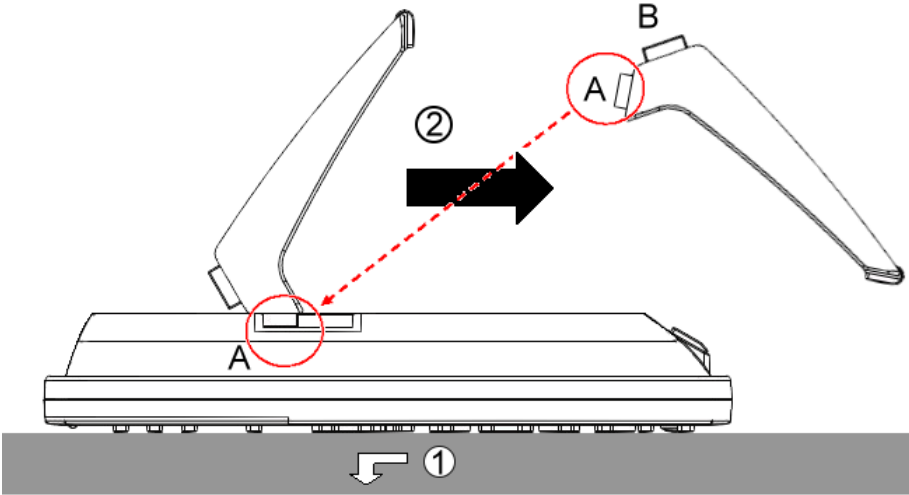


- Step ①: Place the main body of the phone face down in your lap or a firm sofa.
- Step ②: Slide the “A” bolt out of the notch hole.

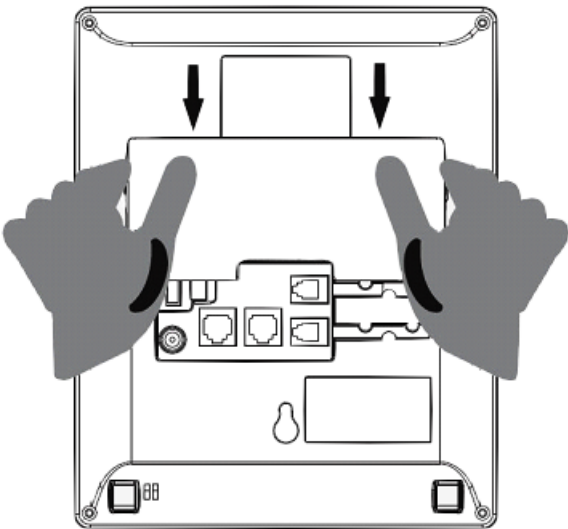

1.3.3. Installation Combination Table

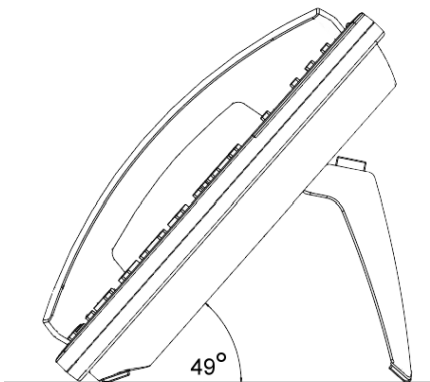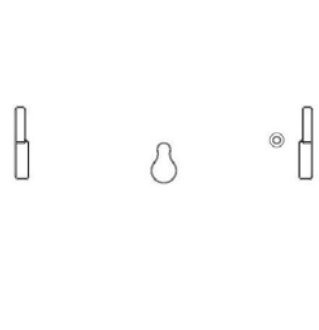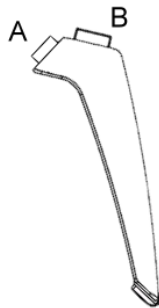Different Tilt Angle Installation	Slot Holes on the Back Shell	Bolt of Stand
	 A	 49°

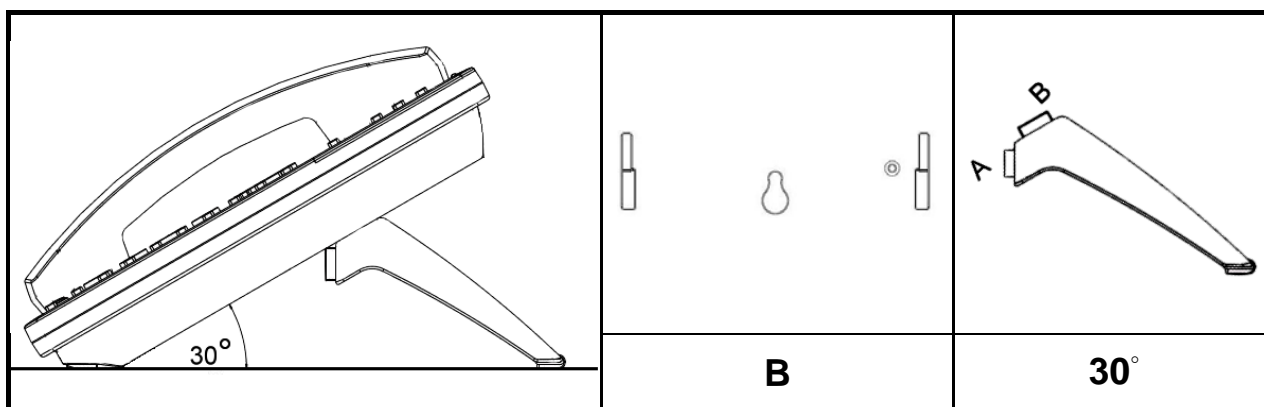


1.3.4. Connect the Handset to the Phone

After unpacking the box, connect the handset to the curly handset cord and then connect the other end of the curly handset cord to the port marked HAND with the handset icon on the bottom of the phone.



1.3.5. Connect the Ethernet Cables


Using a general CAT-5 Ethernet cable, follow the installation steps below:

If your Ethernet switch supports PoE:

Please connect an Ethernet cable to the switch port from the LAN port  of the phone. Then you will see the phone LEDs and buttons light up momentarily and the phone will boot.

 
If your Ethernet switch does not support PoE:

- (1) Please connect an Ethernet cable to the switch port from the LAN port  of the phone.
- (2) Plug in the phone power adaptor* to the wall power outlet then plug the barrel plug to the power port  on the back of the phone. You should see the phone LEDs and buttons light up momentarily and the phone will boot.

To eliminate the requirement for multiple Ethernet cables to an user's location, the user's computer can be connected to the network through the second Ethernet port  on the phone.

CAUTION


Do not use other power adapters. Use only the MOCET IP3022 Power Adapter with your IP3022 IP Phone. Adapters for other devices may damage IP3022 IP Phone.

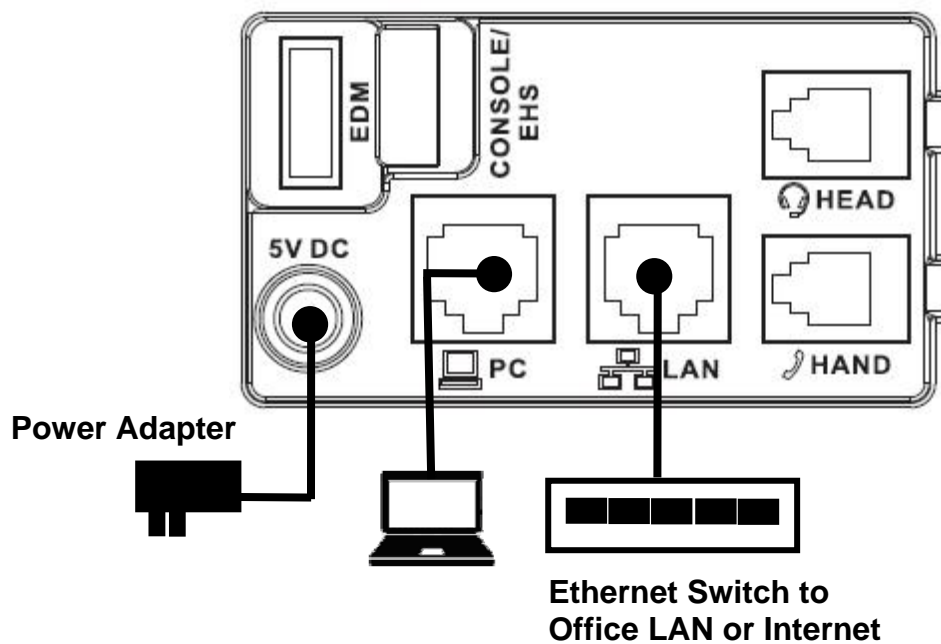**Notice :**



 




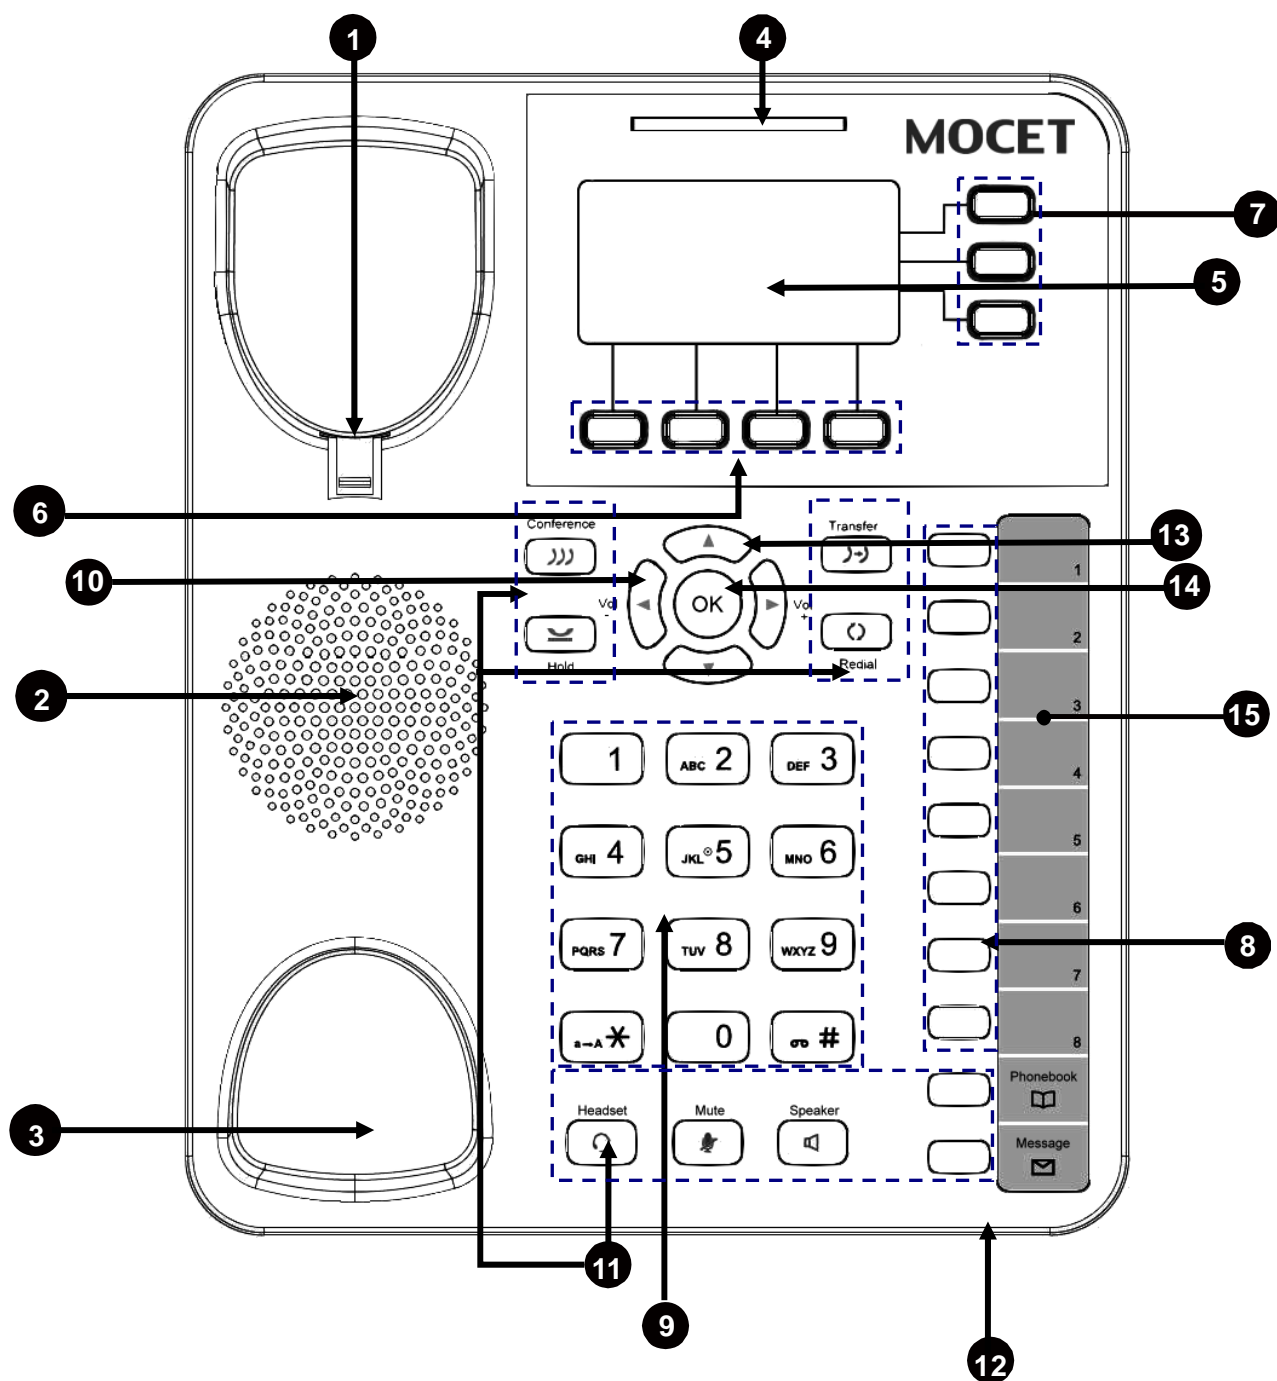

1. The phone takes just under two minutes to start up and becomes operational. There are a series of LED and buttons that will light up periodically to provide boot progress information. Please be patient.
2. The phone does not ship with a power adapter. If you are not using Power over Ethernet (PoE), you must order the power adapter separately from MOCET.

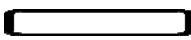


 





1.4. Appearance and Function Description

The IP3022 SOHO IP Deskphone comes with a yellow-green graphic LCD display, including 4 soft keys, 3 line keys, and 5 navigator keys, as well as a traditional keypad, 8 programmable keys and 9 function keys. It can be installed and placed on the desktop or mounted on the wall. The wall mount accessory is available separately. The figure below illustrates the front view of the IP3022 SOHO IP Deskphone. With the point numbers, you can find its name and a simple description of specified part in the following table.



No	Part Name	Description
1	Hanger	The hanger can be pulled; it is reversed for wall-mount installation.
2	Speaker	For ring and hands-free talking.
3	Hook switch & Handset bottom cradle	Under the cradle, a hook switch is used for handset hang-on and hang-off detection. The handset bottom cradle is for the placement of handset; placing the handset on the bottom cradle while on a call will end the call.

4	 Message LED	The message LED. Steady “blue” means the phone is booting or upgrading.
5	LCD Display	The LCD screen is used for displaying phone’s settings, phone number, call status and so forth.
6	 Soft keys	Soft keys displayed on the LCD are used for item selection or control. The various soft key functions depend on the current activity on the phone as they are context-sensitive.
7	 Line keys	These keys are used for line selection. A blue LED is associated with each key to indicate its line/call status.
8	 Programmable keys	Programmable keys can be used for indicating busy lamp field (BLF) status of other phones, speed dial phone numbers, or for activating features of a service or IP-PBX. An Orange/Green/Red/ LED is associated with each key to indicate its status.
9	 Numeric keypad	[1], [2], ..., [9], [*], [0], [#]: The numeric keypad is for dialing numbers.
10	 Volume Control keys	The Volume Control key is used to set the loudness of the ringer, handset, headset and speakerphone functions. While the phone is in idle state, the ringer is adjustable. While in a call, the handset, headset or speaker volume is adjustable. [Note]: The left and right arrow keys can be used for volume adjustment purpose when idle, dialing or talking time.
11	 Headset key	The Headset key is used to activate or deactivate the external headset.
	 MUTE key	The MUTE key is used to activate or deactivate the microphone.
	 Speaker Phone key	The SPKR key is used to activate or deactivate the hands-free feature. A blue LED is used to indicate whether the speakerphone is active or not.

	 Hold key	The Hold key is used to place the active call on hold.
	 Transfer key	The Transfer key is used to transfer a call to another phone.
	 Redial key	The Redial key is used to enter Dialed Record list.
	 Conference key	The Conference key is used to place multiple calls on the phone into a conference on the phone.
	 Message key	The Message key is used to enter VM messages list.
	 Phonebook key	The Phonebook key is used to enter into the Phonebook menu to call, add, edit or delete a contact in a selected phonebook.
12	 Hands-free Microphone	Hands-free microphone hole (on the backshare).
13	 Navigator Control keys	The Navigation Control keys are used for navigating the menus on the phone; menu items are displayed on the LCD screen.
14	 Navigator OK key	The OK button is used to confirm and save a setting on the phone or to dial a phone number.
15	Programmable key plate (DESI) label	The programmable key plate (DESI) label is paper-made. We recommend you to use a pencil for writing so that it can be erased for reuse from time to time.


1.5. Port Functions

The back side view and the I/O connectors of the phone are shown below.

No	Part Name	Description
1	Handset Connector	RJ-9 Jack for connecting handset cord.

2	Headset Connector	RJ-9 Jack for connecting headset cord.
3	LAN Port	RJ-45 Jack 100/10Mbps Ethernet port for connecting to the local area network (LAN). This port can support power over Ethernet (PoE) if the LAN switch provides it.
4	PC Port	RJ-45 Jack 100/10Mbps Ethernet port for connecting to a computer.
5	Power DC Jack	If a power source from adaptor is required, the adapter is plugged in here. Please order the IP3022 power adapter separately from MOCET.
6	EDM Port	<p>SATA interface for attaching the Extended Dial Module (IP-EDM) accessory. Up to two IP-EDMX units can be supported on the IP3022. Please refer to IP-EDMX Quick Installation Guide for more information.</p> <p>[Note]: If you are using a power adaptor 5V/550mA, you should change to a 5V/2A power adaptor which is one standard power supply of IP3000 phone series.</p>
7	Console / EHS Port	<p>This port has two functions. The default function is EHS (Electrical Hook Switch) interface, and the port can be configured via phone Menu settings.</p> <ol style="list-style-type: none"> 1. Console port: it is for engineering maintaince purpose. 2. EHS port: it connects to IP-EHS for Wireless Headset support. This can be connected to a general DHSG, or Jabra UART or Plantronics APD-80 interface.
8	Stand Slots	These 2 slots are used for snapping the stand.
9	Hang Holes	These 2 holes are reserved for wall-mount support.
10	Wire Route Ditch	The wires of Handset and Headset can be routed and run in the ditches.

Their locations are shown in the figure below.

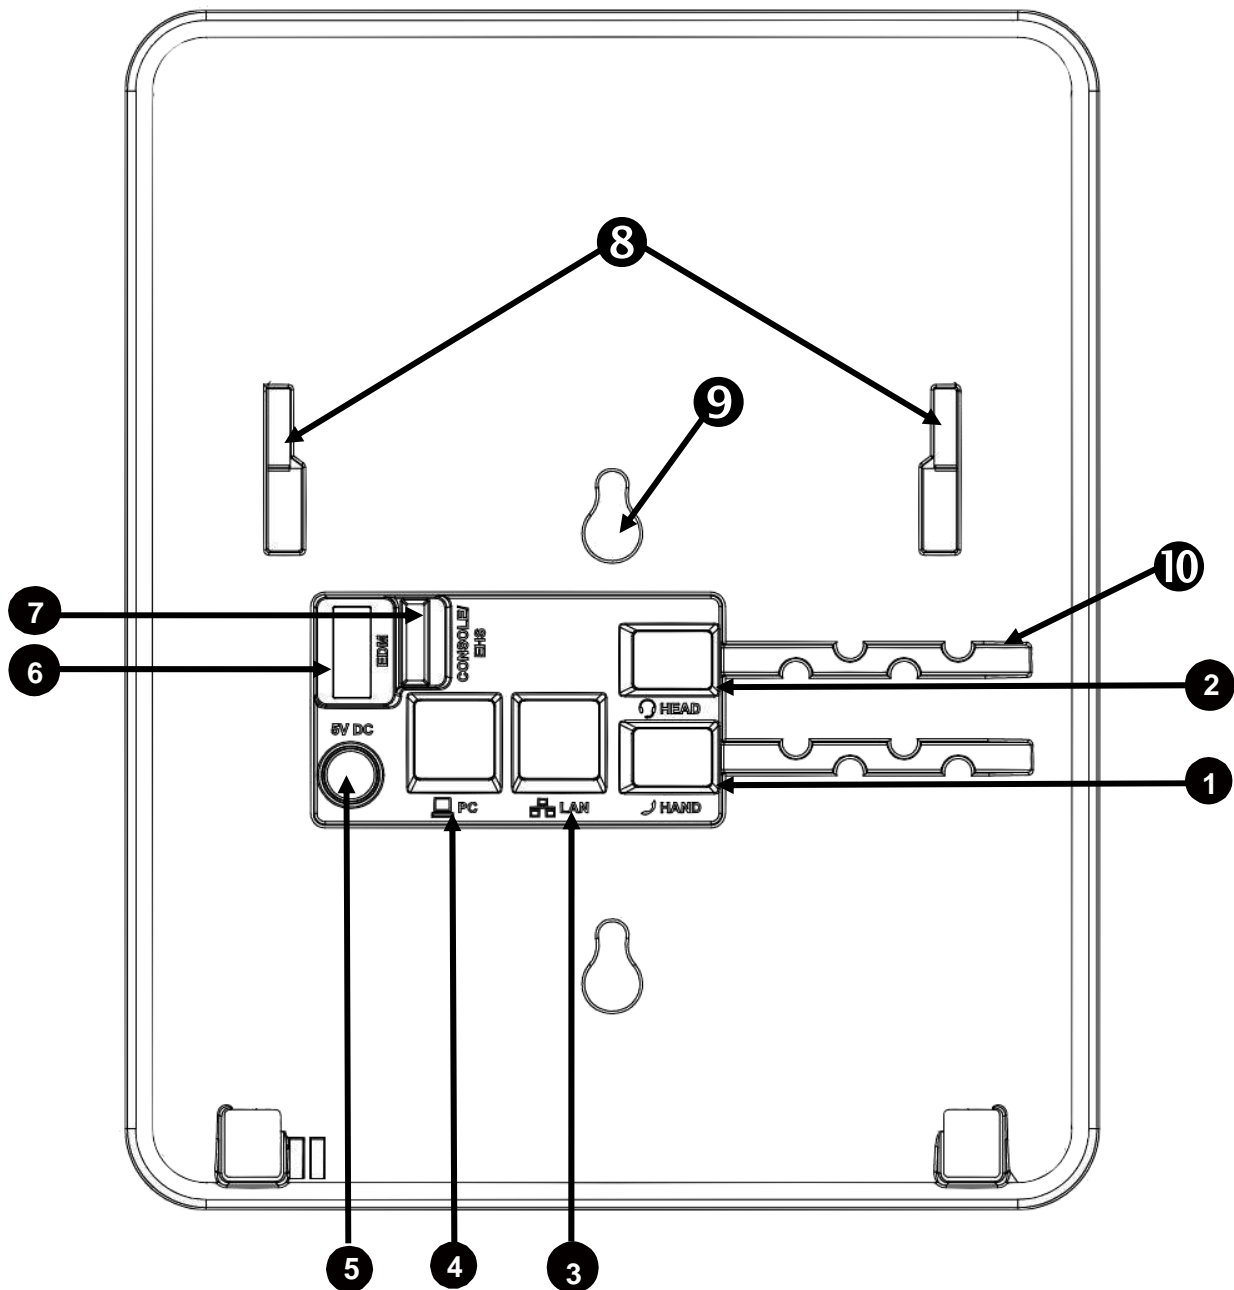

1.6.LED Functions


The following table describes all functions of the LED indicators.

LED	Color	Status	Description
Message LED	Blue	Off	No new voice message(s).
		Steady	Phone is booting or upgrading.
		Blinking slow	New voice message(s) indication. Note: The default is off. Contact your system administrator for further configuration.








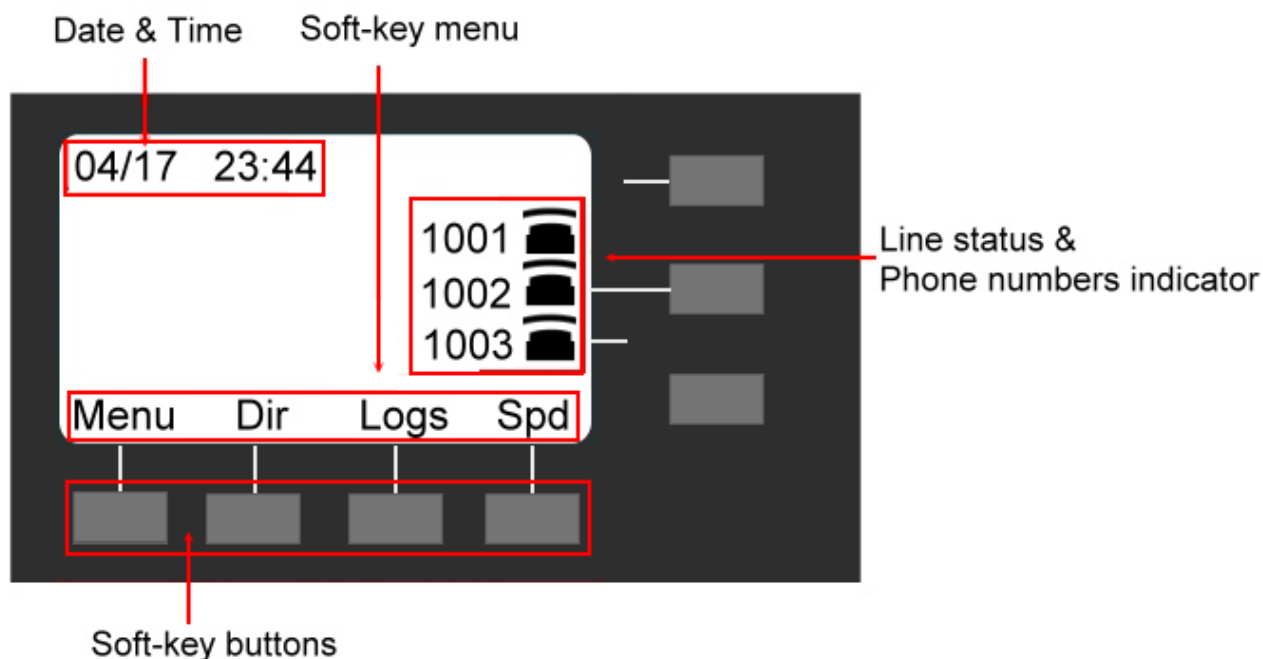






Programmable LED	Off	Off	Feature is set "OFF-Inactive".
	Orange	Steady	Feature is set to "ON – Active".
	Red	Steady	The monitored phone number is busy (BLF mode).
		Flashing fast	The monitored phone number has incoming call. (BLF mode)
	Green	Steady	The monitored phone number is idle (BLF mode).
Line LED	Blue	Steady	Line is active, dialing or in a call.
		Blinking slow	Call is on hold.
		Flashing fast	Incoming call.
Speakerphone LED	Blue	Off	Speakerphone is not in use.
		Steady	On-hook dialing or hands-free mode.

 1.7.LCD Screen Indicators

The following figure shows the standard display of the LCD. There are four soft keys associated with the operation of LCD display. For different menu or status items, the display items will change accordingly.



1.8. Phone Status Icons


<i>Line Status Icon</i>	<i>Description</i>
	The line is registered to the SIP server or service.
	The line is not registered to the SIP server or service.
	The line is registered to the SIP server or service and is in use.
	The line is set for "Call Forwarding" to the configured number.
<i>Screen Icon</i>	<i>Description</i>
	The phone's network cable is disconnected or broken.
	The phone has missed call(s).
	The phone has new text message(s).
	The phone has new voicemail(s).
	The phone is on "Auto Answer" mode.
	The phone is on "Do Not Disturb" mode.
	The phone is enabled "Phone Locked".
	The phone is on "Headset" mode.
	The phone is on "Mute".
	<p>The IP3022 can be connected with up 2 IP-EDMX modules.</p> <p>Each IP-EDMX can provide 24 programmable keys. To use over 8 default programmable keys that IP3022 phone supports, you can expand them with IP-EDMX(s). Please contact your distributor for purchasing.</p> <p>[Warning]: Due to more power required, you need to use 5V/2A power adapter that is used in MOCET IP3062 phone.</p>

2. Getting Started

2.1. Customizing Your Phone from Menu

You can customize your phone by adjusting the settings including display contrast, ring type, device volume adjustment, call settings, and add, edit or delete contacts in the phonebooks of the phone using the on-screen menus, buttons and navigation keys.

 To configure your phone from the menu, you can press **Menu** soft-key under the LCD screen.

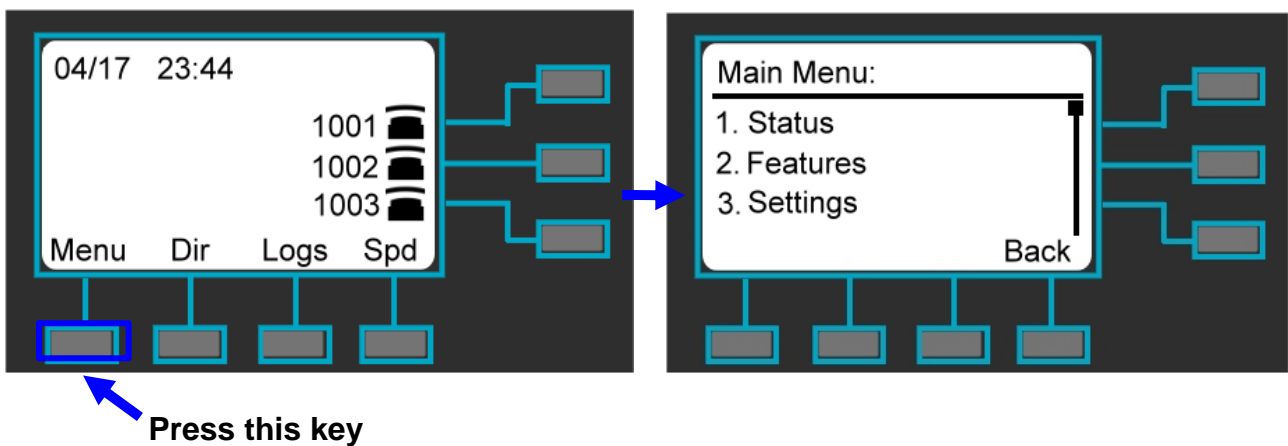

You can navigate through the menu with the navigation keys. The following sections will describe how you can setup your IP3022 phone through this menu. If you require additional information or assistance with your new phone, contact your system administrator.

2.2. Configuring Basic Settings

2.2.1. Volume Setting

 
You can configure following volume settings:

- Ring Volume
- Handset Speaker
- Hands-free Speaker
- Headset Speaker
- Handset MIC
- Hands-free MIC
- Headset MIC

To configure volume:

1. Press "**Menu**".

2. Select **Settings > Basic Settings > Volume Setting**. And select which device volume you want to set.
3. Select from Ring Volume, Handset Speaker, Hands-free Speaker, Headset Speaker, Handset MIC, Hands-free MIC, Headset MIC.

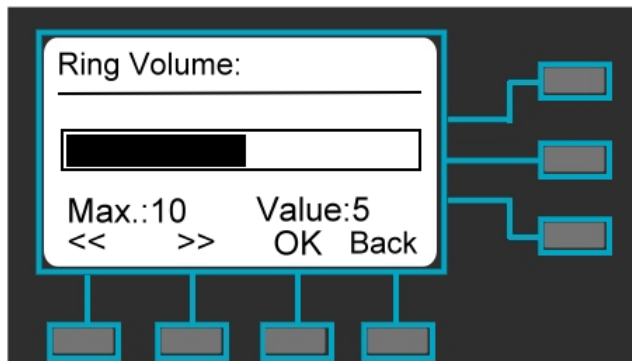

4. Use the **Navigation Volume Up (Vol+)** and **Down (Vol-)** keys to change the volume levels, or use the **Softkey >>** and **<<** keys to change the volume levels .
5. Press the **Navigation OK** key or **Softkey OK** to confirm the change and exit volume change screen.

2.2.2. LCD Contrast

To configure the contrast of the LCD to a comfortable level:

1. Press **Menu**.
2. Select **Settings > Basic Settings > Contrast**.
3. Press **Navigation ►** and **Navigation ◀** keys, or use the **Softkey >>** and **<<** keys to increase or decrease the display contrast.
4. Press **Navigation OK** key or **Softkey OK** to confirm the changes and exit the menu.

2.2.3. Language

To select the user interface language. English(United States) is the default option. For other languages, please contact your system administrator.

To configure language:

1. Press **Menu**.
2. Select **Settings > Basic Settings > Language**.
3. Press **Navigation ▲** and **Navigation ▼** keys to move the cursor.
4. Press **Navigation OK** key to confirm the changes and exit the menu.

2.2.4. Ring Setting

You can configure following ring setting:

- Ring Type
- Delete Ring File

To configure ring:

1. Press **"Menu"**.
2. Select **Settings > Basic Settings > Ring Setting**.
3. There are 13 country ring types for selection. They are United States, China, United Kingdom, Canada, Japan, France, Korea, Germany, Singapore, Hongkong, Taiwan, Australia and Custom. Select the country ring type according to the country that the phone is in. Or select Custom to set the imported ringtone for the phone ringtone.

The custom ringtone is imported through phone web configuration page. Refer to the Chapter5 Using Web Configuration to log in, and follow the path below to find the configuration item.

SW Upgrade → Ring File → Select a ringtone file* → Update

Note: The ringtone file must be wav file with 8-bit u-law, 8000Hz profile.

The option, Delete Ring File, is to delete the imported ringtone.

2.2.5. Local Voicemail

IP3022 supports local voicemail in addition to server based voicemail. To use local voicemail, you need to configure it by following steps.

1. Press **"Menu"**.
2. Select **Settings > Basic Settings > Local Voicemail > No Answer Forward**.
3. Select **"Enable"**
4. Press **Navigation OK** key to confirm the changes and exit the menu.
5. Select **Settings > Basic Settings > Local Voicemail > No Answer Time (sec)**.
6. Configure the time. The default is 15 (sec). The range can be 5~30 sec.
7. Press **Navigation OK** key to confirm the changes and exit the menu.

Note: If the call forward time out duration of local voicemail is more than server based voicemail's, any incoming call will be forwarded to server when the call has no answer, and its voicemail will be left in server, but not the local phone.

2.2.6. Headset Setting

Headset setting is for electrical hook switch (EHS) headset application. If you do not intend to use EHS headset, you will be no need to do any change in the Headset Setting. If you intend to use EHS headset, please refer to IP-EHS Quick Installation Guide for more information.

2.3. Configuring Call Settings


You can configure following call features:

- Do Not Disturb (DND)
- Auto Answer
- Call Forward
- Call Waiting
- Call Completion
- Auto Redial

To configure those features:

1. Press **"Menu"**.
2. Select the **Features**: then select which feature you want to change.
3. Select from **Do Not Disturb**, **Auto Answer**, **Call Forward**, **Call Waiting**, **Call Completion** or **Auto Redial**.


2.3.1. Do Not Disturb (DND)

You can enable or disable the Do Not Disturb (DND) on the **Phone** or a **Line**. When DND is enabled, the DND icon  will display on the phone screen.

If DND is enabled for the phone, the phone will reject all incoming calls automatically. If DND is enabled for a line, the phone will only reject incoming calls from the line automatically. When the incoming call is rejected, the callers hear a busy signal or a message, depending on how your system administrator set up the configuration server.

While DND is activated, you can create an **Authorized Number**. The number is exclusion to the DND rule, so calls from the number will ring through to your phone regardless of the DND setting.

2.3.2. Auto Answer


You can enable or disable the Auto Answer on the **Phone** or a **Line**. When Auto Answer is enabled, the Auto Answer icon  will display on the phone screen.

If Auto Answer is enabled for the phone, the phone will answer all incoming calls automatically. If Auto Answer is enabled for a line, the phone will only answer incoming calls from the line automatically.

2.3.3. Call Forward

The phone supports different call forwards which includes Always Forward, Busy Forward, No Answer Forward and DND Forward. Please only enable one of them.

- Always Forward: Incoming calls are immediately forwarded.
- Busy Forward: Incoming calls are immediately forwarded if the phone is busy.
- No Answer Forward: Incoming calls are forwarded if not answered after a period of time.
- DND Forward: When DND is enabled, incoming calls are immediately forwarded.

In addition, the Call Forward can be configured as the **Phone** which means all incoming calls will be forwarded or a **Line** which means incoming calls from the specified line will be forwarded. When Call Forward is enabled, the Call Forward icon  will display on the screen.

2.3.4. Call Waiting

The Call Waiting is enabled by default for the phone. When the phone is on a call, and there is another incoming call to the phone, the phone will prompt you by flashing the MWI and a line key indicator.

Also, you can enable Call Waiting Tone via phone web configuration page. Refer to the Chapter5 Using Web Configuration to log in, and follow the path below to find the configuration item.

Phone → Features → General Information → Enable Call Waiting Tone

If you do not want to have call waiting prompts, just disable the call waiting.

2.3.5. Call Completion

The Call Completion is especially used for the called party is not available, does not answer the phone or is busy.

The scenario is as below.

1. You make a call to the called party who is not available, does not answer the phone or is busy.
2. At the time, your phone will get “Busy here” on display.
3. Then after the called party’s phone returns to idle screen, your phone will get “Active Call Completion to xxx (called party phone number)?” on display.
4. You can select “OK” or “Dial” to dial the called party’s phone number out, or select “Back” or “Cancel” to ignore this message.

The feature is disabled by default. If you want to have call completion feature, just enable it.

Note: If the called party’s phone has Call Waiting enabled or Voicemail enabled, the Call Completion feature will be ignored.

2.3.6. Auto Redial

The phone supports Auto Redial that redials a busy number in a fixed number of times before giving up. It is useful when you are trying to call someone who is on a call.

To configure Auto Redial:

1. Enter Auto Redial page.
2. Select Redial Enable and press **OK** key to enter the page to enable/ disable auto redial function.
3. When auto redial function is enabled, you may change the Redial Times and Redial Interval to meet your need.
 - Redial times: It is used to set the redial times. The default is 5 times.
 - Redial interval: It is used to set the period to redial again when the call is denied access or expire. It is measured by seconds. The default is 30 seconds.

2.3.7. Hot Line

The phone supports Hot Line. When phone is off hook, it auto dials out the hot line number after the configured delay time duration is up.

To configure Hot Line:

1. Enter Hot Line page.
2. Configure the Hot Line Delay and Hot Line Number to meet your need.
 - Hot Line Delay: It is used to set the delay time. The default is 2(s).
 - Hot Line Number: It is the number to be auto dialed out.

2.3.8. Broadsoft Menu

The Boardsoft Menu is combined with Broadsoft server to provide ACD feature and Hoteling guest feature.

Please refer to the **2.7.24. Hoteling Guest** and **2.7.25. ACD** for more information.

2.4. Managing Contacts

The phone supports 3 different contact lists plus blacklist:

- Local Directory
- LDAP
- Remote Directory
- Blacklist

In the **Local Directory**, you can select either All or its dividual segments which are Private and Public to look up contacts.

You can store up to 100 contacts in **Private** of your phone's directory, and you can add, edit, delete, dial, or search for a contact in this directory.

Contacts in **Public** are provided for you by the administrator or Service Provider. They can be viewed, and used, but not changed or deleted. For more information, please contact your administrator or Service Provider.

The phone can also access a **LDAP Directory** and many **Remote Directories**. Please contact your administrator or Service Provider for more information on how to enable, configure or access this feature.

There are three ways to enter your phone's directory:

- Press the **"Phonebook"** hot key.
- Press **"Dir"** soft-key.
- Navigate to **Menu > Phonebook**.

 
2.4.1. Adding Contacts

For adding contacts, you can either add them one by one through phone menu or upload a list of contacts through phone web page:

To add a new contact through phone menu:

1. Go to the **Phonebook(Dir) > Local Directory > Private**.
2. Press the **"Add"** soft-key.

3. Enter "**Name**" and "**Number**", from the key pad.

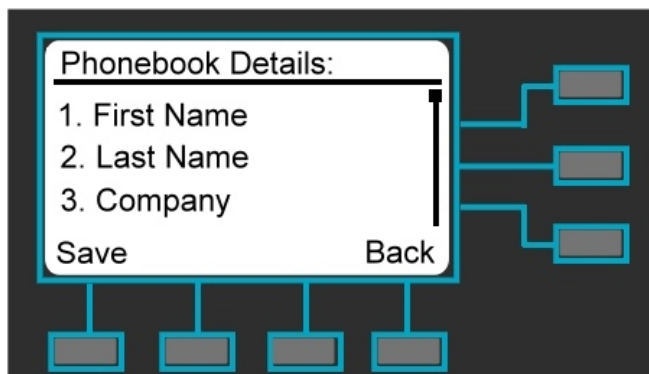

4. Press the "**Save**" soft-key when you are finished.

To upload a list of contacts through phone web page:

1. Refer to the Chapter5 Using Web Configuration to log in phone web page.
2. Follow the path to find the configuration item: **Phonebook → Local → Phonebook update**
3. Choose a phonebook file*, and then press Update button to update the file to the phone.

Note: The phonebook file must be CSV format. You can use back up private phonebook function as below to download the template.

Moreover, you can back up your private phonebook through phone web page.

1. Refer to the Chapter5 Using Web Configuration to log in phone web page.
2. Follow the path to find the configuration item: **Phonebook → Local → Phonebook update**
3. Press Backup button to download the private phonebook file to your computer.

2.4.2. Editing Contacts

To edit your contact:

1. Use the **Navigation Up** and **Down** keys to select the contact your want to edit.
2. Press the "**OK**" key to enter the Phonebook Details page.
3. Use the **Navigation Up** and **Down** keys to select the fields you want to change.
4. When finished making changes, press the "**Save**" soft-key to save the changes.

2.4.3. Deleting Contacts

To delete your contact:

1. Use the **Navigation Up** and **Down** keys to select the contact your want to delete.
2. Press "**Opt**" soft-key to enter the Option page.
3. Use the **Navigation Up** and **Down** keys to select "Delete" item.
4. Press "**OK**" key to delete the selected contact.

5. The contact is deleted from the directory.

2.4.4. Managing Blacklist

The Blacklist is for you to manage persons who you do not want to be contacted with through the phone.

To manage your phone's Blacklist, you can either jump into Blacklist to edit, or add a contact from Local Directory or Call Logs to the Blacklist.

To edit Blacklist directly:

1. Go to the **Phonebook(Dir) > Blacklist**.
2. Use the **Navigation Up** and **Down** keys to select a contact.
3. Press "**Add**" soft-key to add a new contact in the Blacklist; press "**DEL**" soft-key to delete a contact from the Blacklist; press "**UnBlk**" soft-key to unblack a contact from Blacklist.

To move a contact from Local Directory to the Blacklist:

1. Go to **Local Directory > Private**.
2. Press "**Opt**" soft-key to enter the Option page.
3. Use the **Navigation Up** and **Down** keys to select "**Move to Blacklist**" item.
4. Press "**OK**" key to move the selected contact to Blacklist.

Note: Only contacts in the Private are allowed to be moved to the Blacklist.

To move a contact from Call Logs to the Blacklist:

1. Go to **Call Log(Logs) > Dialed Calls/ Missed Calls/ Answered Calls**.
2. Press "**Opt**" soft-key to enter the Option page.
3. Use the **Navigation Up** and **Down** keys to select "**Add to Blacklist**" item.
4. Press "**OK**" key to add the selected contact to Blacklist.

2.4.5. Managing Speed Dial List

The Speed Dial List let you store up to 10 phone numbers that you can access and dial out a number from the list easily.

To configure a speed dial number:

1. Press the "**Spd**" soft-key below the LCD screen.
2. Select the speed dial number to configure (from key 0 to key 9). And press the **Navigation OK** or "**Edit**" soft-key to enter the editing page, and enter the phone number.
3. Press the **Navigation OK** key to confirm the changes and exit the menu.

2.4.6. Placing a Call to a Contact

You can place a call to a contact from one of the following three options.

To dial from the phonebook:

1. Enter **Phonebook** menu.
2. Navigate to a contact.
3. Press the **“OK”** key to enter the Phonebook Details page.
4. Use the **Navigation Up** and **Down** keys to select a number field that you want to dial.
5. Press the **“Dial”** soft-key, the phone will dial the number selected.

To dial from the speed dial list:

1. Enter **Speed Dial List**.
2. Navigate to a number.
3. Press the **“Dial”** soft-key, the phone will dial the number selected.

To dial from the call logs list:

 
1. Enter **Call Logs** menu.
2. Navigate to a number.
3. Press the **“Dial”** soft-key, the phone will dial the number selected.

2.5.Managing Call Logs

In the phone, there are three call log types:

- Dialed Calls
- Missed Calls
- Answered Calls

The call logs save the last 30 numbers of dialed, missed or answered. For example, the following is the Dialed Calls list screen.

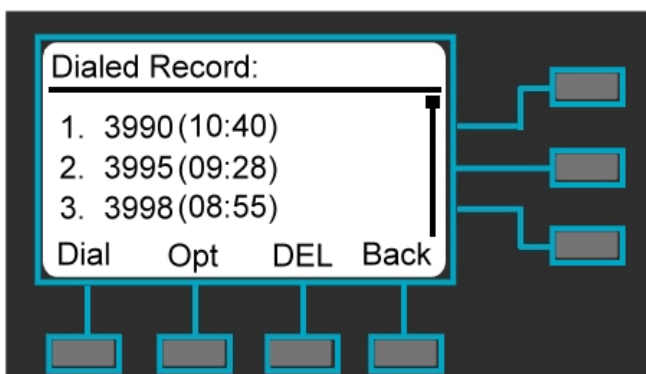

From the call log lists, you can view, delete, dial, or add to directory/ blacklist.

To manage the selected call log:

- Use the **Dial** soft-key to redial the call.
- Use the **Opt** soft-key to enter Options page, and then select **Add to Directory** to add the number in the Private contact list.
- Use the **Opt** soft-key to enter Options page, and then select **Add to Blacklist** to add the number in the Blacklist.
- Use the **Del** soft-key to delete the selected item.
- Use the **Back** soft-key to exit the call list screen.

 
2.6.Locking Your Phone Keypad

You can lock the keypad of your phone when you are temporarily not using it. This feature helps you to protect your phone from unauthorized use.

When phone is locked, all keys are locked, except soft keys and numeric keypad. You are only allowed to answer incoming calls by lifting the handset, pressing the Headset key or pressing the Speaker key. But when your phone is configured an emergency number, you still can make an emergency call from the locked phone.

To activate your phone keypad lock:

1. Press the “**Menu**” soft-key below the LCD screen.
2. Select “**Features**” in the main menu.
3. Select “**Phone Lock**” in the features.
4. Select “**Enable**” in the phone lock.
5. When you move back to the phone main screen, the phone screen will display as below. Your phone keypad is locked.

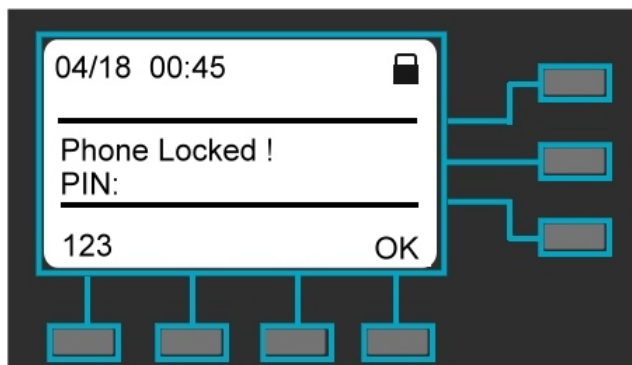

To deactivate your phone keypad lock:

1. Enter the PIN code. (The default PIN code is 1111, which is the same as the password of user mode.)

2. Press **OK** soft-key to deactivate the keypad lock.

2.7. Configuring Programmable Keys

IP3022 phone supports 8 programmable keys. You can assign predefined functionalities to the programmable keys located on the right of the phone. Programmable keys allow you to use quick access features such as intercom and busy forward. The programmable keys LED will indicate the monitoring status when the keys are assigned specific features, such as BLF and SLA. The programmable keys provide no functionality by default.

To configure the programmable key:

1. Press the **"Menu"** soft-key below the LCD screen.
2. Select **"Features"** in the main menu.
3. Select **"Program Key"** in the features.
4. Select **"FUNC #1~8"** in the program key.
5. Select a desired function for the selected key.
6. Enter a corresponding value for the Function Number field of the selected key.
7. Select a line in the Line Selection for the selected key.

The programmable key functionalities are explained in detail as below:

- None
- Do Not Disturb(DND)
- Lock IP-Phone
- Speed Dial(Abbreviated Codes)
- Busy Forward
- Always Forward
- No Answer Forward
- DND Forward
- Auto Answer
- Caller Blocking
- BLF
- Call Park
- SLA
- Asterisk Parking Number
- Asterisk Parking Slot
- Intercom
- Feature Code
- DTMF
- Call Trace
- Emergency Call
- Broadsoft BLF

- Multicast Group
- Call Return
- LDAP
- Hoteling Guest
- ACD
- Record
- Dial Prefix
- Hot Desking

2.7.1. Do Not Disturb

You can use this key feature to activate or deactivate the DND mode. When the DND is activated, the programmable key LED will turn on steady orange.

Usage:

1. Press the programmable key to activate the DND mode.
2. Press the programmable key again to deactivate the DND mode.

2.7.2. Lock IP-Phone

You can use this key feature to activate the phone-locked mode. When phone-locked is activated, the programmable key LED will turn on steady orange.

Usage: Press the programmable key to activate the phone-locked mode.

2.7.3. Speed Dial (Abbreviated Codes)

You can use this key feature to activate the speed-dialing. If the programmable key is configured as Speed Dial, fill in the speed-dialing phone number in the Function Number field and select a line in the Line Supported.

Usage: Press the programmable key to activate the speed-dialing.

2.7.4. Busy Forward

If the programmable key is configured as Busy Forward, and its Status is enabled, the programmable key LED will turn on steady orange.

Usage: Press the programmable key to access Busy Forward menu directly, and configure forward DST number.

2.7.5. Always Forward

If the programmable key is configured as Always Forward, and its Status is enabled, the programmable key LED will turn on steady orange.

Usage: Press the programmable key to access Always Forward menu directly, and configure forward DST number.

2.7.6. No Answer Forward

If the programmable key is configured as No Answer Forward, and its Status is enabled, the programmable key LED will turn on steady orange.

Usage: Press the programmable key to access No Answer Forward menu directly, and configure forward DST number.

2.7.7. DND Forward

If the programmable key is configured as DND Forward, and its Status is enabled, the programmable key LED will turn on steady orange.

Usage: Press the programmable key to access DND Forward menu directly, and configure forward DST number.

2.7.8. Auto Answer

You can use this key feature to activate or deactivate the Auto Answer mode. When the auto answer is activated, the programmable key LED will turn on steady orange.

Usage:

1. Press the programmable key to activate the Auto Answer mode.
2. Press the programmable key again to deactivate the Auto Answer mode.

2.7.9. Caller Blocking

You can use this key feature to activate or deactivate the Caller Blocking mode. When the caller blocking is activated, the programmable key LED will turn on steady orange.

If the programmable key is configured as Caller Blocking, fill in the phone number that you would like it to be blocked in the Function Number field and select a line in the Line Supported.

Usage:

1. Press the programmable key to activate the Caller Blocking mode.
2. Press the programmable key again to deactivate the Caller Blocking mode.

2.7.10. BLF

You can use the BLF feature to monitor a specific phone number in the system for idle/ ringing/ busy status.

For example, a programmable key is configured as BLF on your phone for monitoring the status of your coworker's phone.

- When the monitored phone number is in idle, the BLF key LED illuminates steady green on your phone.
- When the monitored phone number has an incoming call, the BLF key LED illuminates flashing red on your phone.
- After the coworker picks up an incoming call, the BLF key LED illuminates steady red on your phone.

If the programmable key is configured as BLF, fill in the phone number that you would like to monitor in the Function Number field and select a line in the Line Supported.

Usage:

1. Monitor the specific phone number's status on the phone.
2. Press the BLF key (steady green) to dial out the monitored phone number directly when it is idle.
3. Pick up a call directly by pressing the BLF key (flashing red) when the monitored phone is ringing.

For more information, contact your system administrator.

2.7.11. Call Park

The Call Park feature is allowed you to "park" a call and then pick up the call from another extension.

If the programmable key is configured as Call Park, fill in the call park feature code* in the Function Number field and select a line in the Line Supported.

Usage: During a call, to park a call directly by pressing the Call Park key. The call will be parked in the specified parking lot. Another extension can pick up the call by pressing a specified sequence of codes*.

*For call park feature code and pick up code, contact your system administrator for more information.

2.7.12. SLA

The shared line appearance(SLA) feature is supported only when the phone is working with Broadsoft server. It is configured by assigning the same extension number to multiple lines. You can use the shared line feature to share an extension number which is used on two or more IP phones at the same time. An incoming call to that number will cause all phones to ring simultaneously. The incoming call can be answered on one of the phones but not all of them.

This feature is very useful in the boss and secretary scenario. For example, the secretary can assign the boss' extension number by configuring a shared line key on her phone. When there is an incoming call to the extension number of the boss, both the phones of the boss and the secretary will ring simultaneously. Either the boss or the secretary can answer the call. Calls on shared line can be placed on hold or barged in.

If the programmable key is configured as SLA, fill in the extension number that you want it to share your line in the Function Number field and select a line in the Line Supported.

Usage:

1. To barge in a shared line call, press the shared line key on any other phone when there is an active call on the shared line.
2. To place the call on hold, press Hold key or the shared line key when there is an active call on the shared line.
3. To retrieve a call placed on hold, press the shared line key on any phone when there is a held call on the shared line

2.7.13. Asterisk Parking Number

The feature is especially designed for Asterick phone system. It always works with Asterick Parking Slot, to perform “park” a call and then pick up the call from another extension.

If the programmable key is configured as Asterisk Parking Number, fill in the Asterisk parking number code* in the Function Number field and select a line in the Line Supported.

Usage: During a call, to park a call directly by pressing the Asterisk Parking Number key. The call will be parked in the specified parking lot.

*For Asterisk parking number code, contact your system administrator for more information.

2.7.14. Asterisk Parking Slot

The feature is especially designed for Asterisk phone system. It always works with Asterisk Parking Number, to perform “park” a call and then pick up the call from another extension.

If the programmable key is configured as Asterisk Parking Slot, its LED will turn on steady green. Fill in the Asterisk parking slot code* in the Function Number field and select a line in the Line Supported.

Usage: Pick up the parked call directly by pressing the Asterisk Parking Slot key (flashing red).

*For Asterisk parking slot code, contact your system administrator for more information.

2.7.15. Intercom

Intercom is a useful feature in an office environment to quickly connect with the operator or the secretary. You can press the intercom key to automatically connect with a remote extension for outgoing intercom calls, and the remote extension will automatically answer the incoming intercom calls. If the intercom call comes into the phone while an active call is already present, the phone puts the active call on hold and answers the intercom call.

If the programmable key is configured as Intercom, fill in the extension number that you want to do intercom with in the Function Number field and select a line in the Line Supported.

Usage:

The Intercom call feature depends on PBX/SIP Server as there are different intercom call codes for each servers; for example, the Asterisk default intercom code is “*80”. To place intercom call on an Asterisk server, just make a call to “*80”+ [destination number] (“*801001” for example). For other phone systems or hosted SIP services, please contact your administrator or Service Provider for more information.

2.7.16. Feature Code

Feature Code has similar function as Speed-dialing, but it only can be activated when phone is in idle mode.

If the programmable key is configured as Feature Code, fill in the feature code in the Function Number field and select a line in the Line Supported.

Usage: Press the programmable key to activate the feature code.

2.7.17. DTMF

You can use this key feature to send key sequences via DTMF.

If the programmable key is configured as DTMF, fill in the key sequences that you want to send in the Function Number field and select a line in the Line Supported.

Usage: Press the DTMF key during an active call to send the key sequence specified in the Function Number field.

Note: DTMF sequence is allowed to be: "0-9", "*", "#", "a-z" and "A-Z".

2.7.18. Call Trace

The call trace feature is supported only when the phone is working with Broadsoft server. It is allowed you to trace an incoming call by dialing a feature access code* after the call is received.

If the programmable key is configured as Call Trace, fill in the feature access code* in the Function Number field and select a line in the Line Supported.

Usage: Press the Call Trace key, you will hear an announcement followed by dial tone. You receive a confirmation announcement and the requested trace is sent in the form of an alarm to the system provider. If neither the caller's name nor number is available to the server, you receive an error announcement and the trace is not sent.

For more information, contact your system administrator.

2.7.19. Emergency Call

You can use the Emergency Call feature to make a sequence of calls immediately by pressing the programmable key configured as Emergency Call.

If the programmable key is configured as Emergency Call, fill in a sequence of emergency phone numbers in the Function Number field and select a line in the Line Supported.

Usage:

1. The emergency call feature can support multi-numbers which are separated by comma, e.g., "106,107,108".
2. Press the Emergency Call key, the phone will dial out emergency numbers in sequence.
3. The phone stops dialing only if the emergency call is answered by the remote party. However, if you press the Emergency Call key again, the phone also stop dialing.

For more information, contact your system administrator.

2.7.20. Broadsoft BLF

The Broadsoft BLF feature is supported only when the phone is working with Broadsoft server.

You can use the feature to monitor a specific phone number in the system for idle/ ringing/ busy status.

For example, a programmable key is configured as Broadsoft BLF on your phone for monitoring the status of your coworker's phone.

- When the monitored phone number is in idle, the key LED illuminates steady green on your phone.
- When the monitored phone number has an incoming call, the key LED illuminates flashing red on your phone.
- After the coworker picks up an incoming call, the key LED illuminates steady red on your phone.

If the programmable key is configured as Broadsoft BLF, fill in the phone number that you would like to monitor in the Function Number field and select a line in the Line Supported.

Usage:

1. Monitor the specific phone number's status on the phone.
2. Press the Broadsoft BLF key (steady green) to dial out the monitored phone number directly when it is idle.
3. Pick up a call directly by pressing the Broadsoft BLF key (flashing red) when the monitored phone is ringing.

For more information, contact your system administrator.

2.7.21. Multicast Group

The Multicast Group feature is allowed you to make a multicast group call that all the phones in the group will ring after the multicast group key is pressed.

If the programmable key is configured as Multicast Group, fill in a multicast address* in the Function Number field and select a line in the Line Supported.

Usage: Press the Multicast Group key to make a multicast group call.

*For multicast address, contact your system administrator for more information.

2.7.22. Call Return

You can use this call return feature to place a call back to the last incoming call.

Usage: Press the Call Return key to dial out the last incoming call phone number when it is idle.

2.7.23. LDAP

You can use this key feature to enter LDAP directory menu quickly.

Usage: Press the LDAP key to enter LDAP directory.

2.7.24. Hoteling Guest

The Hoteling Guest feature is supported only when the phone is working with Broadsoft server. The feature is used to allow you to associate your service profile with the phone that has the Hoteling Host service assigned.

Usage:

1. Press the Hoteling Guest key to enter Guest Login menu.
2. Enter your login ID* and password*.

*Contact your system administrator for more information.

2.7.25. ACD(Automatic Call Distribution)

The ACD(Automatic Call Distribution) feature is supported only when the phone is working with Broadsoft server. The feature is normally used for customer service, such as call center. Contact your system administrator for more information.

Usage:

1. Press the ACD key to enter ACD menu.
2. Choose one status on the phone.

- Sign-In: to log in the ACD system.
- Sign-out: to log out from the ACD system.
- Available: change to Available if you are available to receive the call from ACD system.
- Unavailable: change to Unavailable if you are not available to receive the call from ACD system.
- Wrap-Up: when you just end a call, the ACD system will configure the Wrap-up status for your phone, so that you can have a period of time focus on the last call instead of dealing with the incoming call.

2.7.26. Record

The Record feature enables you to record a call. It depends on the support of server* and the duration you can record for is also defined by the server. In addition, please note the feature is allowed to be used for the call in Line1.

Usage:

1. During a call, press the Record key to start recording.
2. Press the Record key again to stop recording.

*Contact your system administrator for more information.

2.7.27. Dial Prefix

You can use this key feature to add a specified prefix number before the dialed number.

If the programmable key is configured as Dial Prefix, fill in the prefix number in the Function Number field and select a line in the Line Supported.

Usage: Press the Dial Prefix key when the phone is idle, the phone enters into the dialing screen and displays the prefix number which you specified in the Function Number field, enter other digits and then dial out.

2.7.28. Hot Desking

The Hot Desking feature is regularly used in places where not all the employees are in the office at the same time, or not in the office for very long at all, which means actual personal offices would be often vacant, consuming valuable space and resources. You can use Hot Desking on the phone to log out the existing accounts and then log in a new account*, that is, many users can share the phone resource in different time.

You can use this key feature to enter Hot Desking menu quickly.

Usage: Press the Hot Desking key to enter Hot Desking menu.

Note:

1. When you log in the phone using a new account, the existing account will be cleared out.
2. Contact your system administrator for login account.

2.8. Configuring Extended Dial Modules (IP-EDMX)

The 24 programmable keys on IP-EDMX has the same predefined functionalities as the 8 programmable keys on the phone.

To configure the programmable key:

1. Press the **"Menu"** soft-key below the LCD screen.
2. Select **"Features"** in the main menu.
3. Select **"EDM Setting"** in the features.
4. Select **"EDM 1"** or **"EDM 2"** in the EDM setting.
5. Select **"Key 1"**, **"Key 2"**,..... **"Key 24"** in the key selection.
6. Select a desired function for the selected key.
7. Enter a corresponding value for the Function Number field of the selected key.
8. Select a line in the Line Selection for the selected key.

2.9. Viewing Your Phone's Information

Using the menu of the phone, you can check the phone's model name, serial number, MAC address, firmware version, and network status.

To view the information:

1. Press the **"Menu"**.
2. Select **"Status"**.
3. Use the **Navigation Up** and **Down** keys to view the information.

2.10. Resetting Your Phone

In user mode, you can reset the user configuration or phonebook of the phone.

To reset either one of them:

1. Press the **"Menu"** soft-key below the LCD screen.
2. Select **"Reset to Factory"** in the main menu.
3. Select **"Reset User CONFIG"** or **"Reset Phonebook"** in the reset type.

3. Using Basic Features

The IP3022 SOHO IP Deskphone is designed to be used like a regular phone on a public switched telephone network (PSTN). You can place calls, transfer a call to someone else, or conduct a conference call.

With each line, the phone can support two simultaneous calls. However, only one of these calls can be active at a time. The active call is the one you are using to speak and listen to. The inactive calls can be:

- On hold
- Joined in a conference (with 3 callers)
- “Incoming call” or “Ringing”

This chapter provides basic operating instructions for the phone including:

- Placing a Call
- Cancelling a Call
- Answering a Call
- Rejecting a Call
- Ending a Call
- Redialing a Number
- Putting a Call on Hold
- Resuming a Call
- Muting/ Unmuting a Call
- Setting Up a Conference
- Transferring a Call
- Forwarding Calls

3.1. Common Terms

To use the phone, you need to follow some conventions that we will mention in this guide. In the following descriptions, we will introduce some common terms for your understanding.

3.1.1. Lines

A “Line” in this guide represents how many phone numbers supported in one phone. For example, the IP3022 can support up to 3 lines configured for the same or different service providers or servers. Therefore, the phone is said to support **multiple line appearances**.

3.1.2. Calls

A “Call” in this guide represents how many simultaneous connections can be made to a single phone number. Each line of service in the phone can support two calls simultaneously. This allows the user to place one caller on hold and talk to the other person in another call on the same Line. Therefore, the phone is said to support **multiple call appearances**.

3.1.3. Registration

The phone must be configured before it can perform some basic functions. Although the phone can make a peer-to-peer SIP call by dialing the other user’s IP address (i.e., 192.168.0.12) directly on the keypad, this is inconvenient and it is hard to remember all the IP addresses of phones on the system. This is why a hosted SIP server or local IP PBX implements a Registrar service, which allows the connected phones to find and dial each other more easily by extension numbers or names instead of IP addresses.

In addition, the hosted SIP server or IP PBX helps keep track of active phones, their IP addresses for routing calls, as well as keeping track of which phones are busy or idle. Most hosted SIP services and IP PBXs support Direct Station Select (DSS) as well as showing the Busy Lamp Field (BLF) status of phones. These allow you to directly dial another extension and can show you whether the selected phone is ringing or on a call or not.

Usually, the hosted SIP service or IP PBX will also use the Registrar service to send messages to your phone to alert you that you have voicemail. This is called message waiting indication (MWI).

3.1.4. Caller ID

When you receive a call, the caller's phone number is shown on the screen, if the caller has not chosen to hide his number and if the network supports the Caller ID feature. The phone can display both the Caller ID (CLID) and the Caller Name (CNAM) of the caller if it is available. Not all services and servers support CLID and CNAM. For more information about this topic, please contact your service provider or system administrator.

3.2. Installing Your IP Phone



Before placing the phone into operation, either you or your administrator or Service Provider has to install the phone on your network. Please contact your administrator or Service Provider for more details.

3.3. Configuring Your IP Phone for Service

The phone must be configured for the hosted SIP service or IP PBX before operation. The phone is usually pre-configured by the administrator or hosted SIP service provider. For an advanced or experienced user, you may refer to the IP3022 Administrator Guide for full information on how to configure all the settings of the IP3022 IP phone.

3.4. Line Selection



The phone can support up to 3 SIP lines. To select a line you can:


1. Use the preferred line setting. That means when you pick up handset, or press the speakerphone key, or press headset key when not on a call, the phone will automatically use the preferred line for the call.
2. If the preferred line is not the line you want to use, you can press **Line Key** buttons () on the right hand side of the LCD to switch to the desired line. Press the **Line Key** buttons () , which will connect to the chosen line.







3.5. Placing a Call

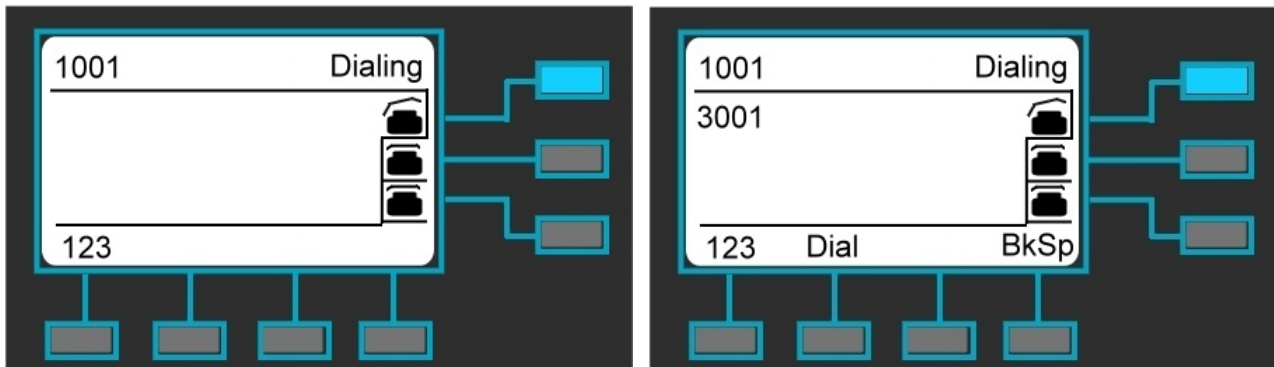You can place a call in many ways from the phone:

- Using the handset
- Using the speakerphone
- Using the headset
- Pressing a line key


You can also dial the number first and then choose the method you will use to dial the other party. This is called pre-dialing. During a call, you can alternate between using the handset, headset or speakerphone modes by pressing the speakerphone key() , the headset key() or picking up the handset while on a speakerphone call. The call duration on an active call is shown on the LCD during the call. To place a new call:



Operation	Description	
Making a call	 or  or   Line Key	1. Pick-up the handset or press a line key or press the speakerphone key or press the headset key. → You will hear a dial tone.
		2. Use the keypad to dial the phone number. → The LCD window displays the number you enter. Note: You may use the “BkSp” soft-key to delete the last digit.
		3. On-hook the handset when your conversation is over.


3.6. Adjusting Call Volume

During a conversation, if the voice volume is too low or too high, you may adjust it.
 To adjust volume while on a call:

Operation	Description	
Adjusting Call Volume		Press the Volume control key to adjust the volume.

3.7. Canceling a Call

After you dial a call, but the called party has not answered, you can Cancel the call.

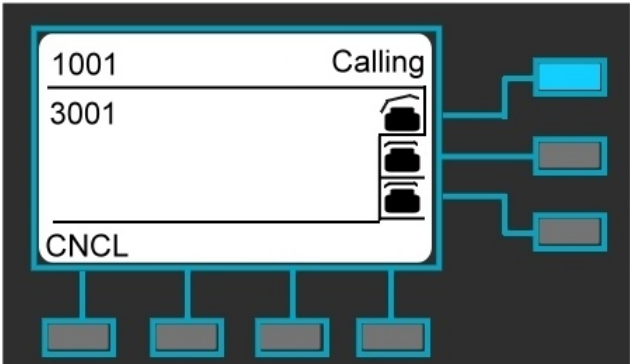





Operation	Description	
Canceling a call	CNCL	Press “CNCL” soft-key to reject the call. <i>If only the calling call on the phone, you can just press speakerphone or put down handset to cancel the call.</i>

3.8. Answering a Call

 When there is a new incoming call on the phone, you can answer a call by:

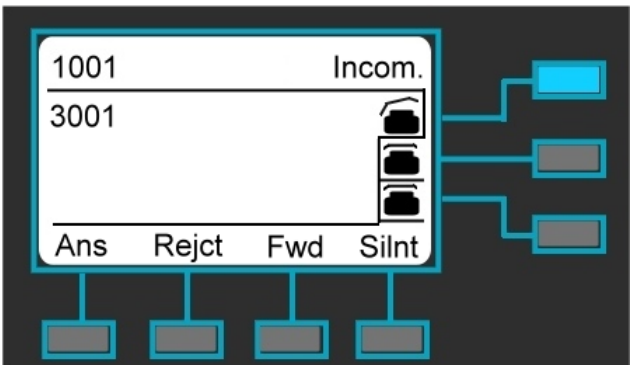- Using the handset
- Using the speakerphone
- Using a headset
- Pressing “**Ans**” soft-key



Operation	Description	
Answering a call	 or  or  or Answer	<p>If there is no other call, just pick-up the handset or press the speakerphone key or the headset key or press the “Ans” soft-key upon hearing the phone ringing.</p> <p>If there is another call, press “Ans” soft-key to accept the call, the previous call will be placed on hold automatically.</p>

3.9.Rejecting a Call

When there is an incoming call on the phone, you can reject the call.

Operation	Description	
Rejecting a call	Reject	<p>Press “Rejct” soft-key to reject the call.</p> <p>After pressing the “Rejct” soft-key, the call will be dropped directly. The record will be logged in answered call list. Other call features are not affected by this operation.</p>

3.10.Muting a Call Ringtone



When there is an incoming call on the phone, you can mute the call ringtone.






Operation	Description	
Muting a call ringtone	Silnt	<p>Press “Silnt” soft-key to mute the call ringtone.</p> <p>After pressing the “Silnt” soft-key, the call ringtone will be muted directly.</p>

 3.11.Ending and Holding and Resuming a Call

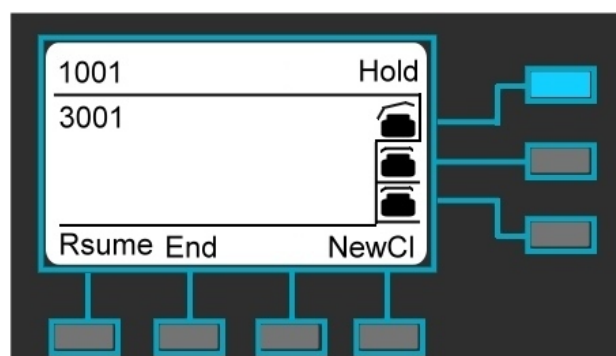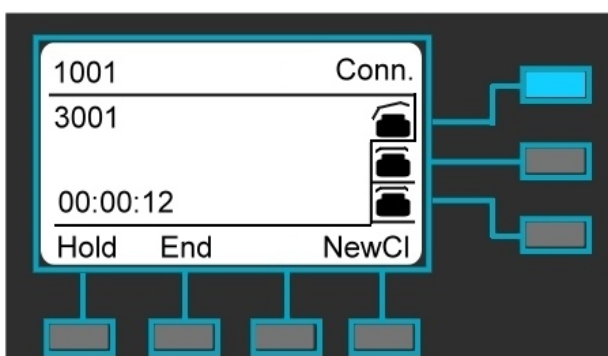

 When a call is in connected state, you can end a call by:


- Using the handset
- Using the speakerphone
- Using a headset
- Pressing “**EndCall**” soft-key



Operation	Description	
Ending a call	 or  or  or End	<p>If there is only one call, just place the handset back into the cradle, press the speakerphone key or the headset key or press “End” soft-key to end the call.</p> <p>If there is another call, press the “End” soft-key to end the call.</p>
Holding a call	 or Hold	Press the “ Hold ” soft-key or Hold key on the phone to place an active call on hold.
Resuming a call	 or Resume	Press the “ Resume ” soft-key or Hold key on the phone again to resume the inactive call.


3.12.Muting and Un-muting a Call

While in a conversation, you may mute the microphone by pressing the **MUTE** () button. The MUTE icon () will be shown on display. When muted, the other caller will not hear anything from your phone.

Pressing the **MUTE** () key again will Un-mute the phone.

3.13.Redialing a Number

To redial the last numbers you dialed:

 
1. Press **Redial**() hot key.
2. Phone will enter “**Dialed Record**” list.
3. Select the number you want to redial.
4. Press “**Dial**” soft-key to dial out.


For more information, please see **2.5. Managing Call Logs**.

3.14.Setting up a Conference Call

The phone can support a 3-party conference call.

To set up a conference:

 1. Call the first party and Hold the call.
2. Press “**NewCI**” soft-key to call another party
3. Press the **Conference** () hot key to set up a 3-party conference call.

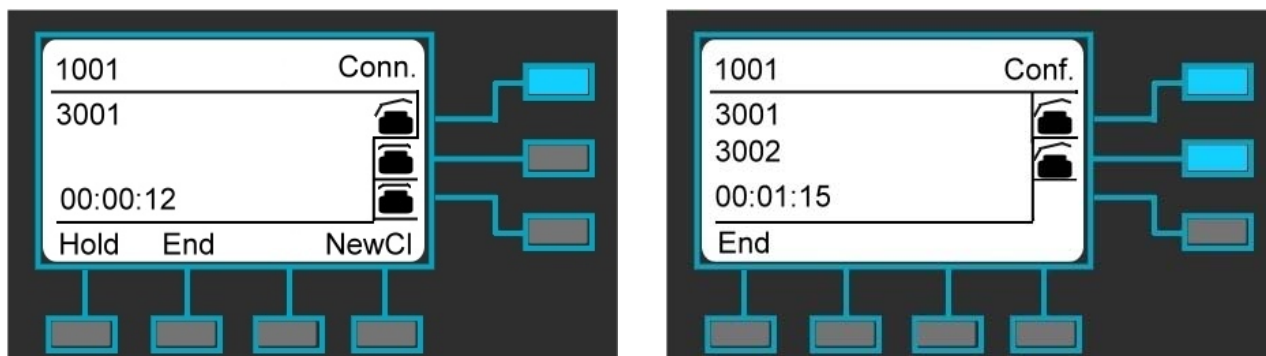

3.15. Transferring a Call

A call can be transferred in one of three ways:

 
 
Blind Transfer: The call is automatically transferred after you dial the number of the party to whom you want to transfer the call.

Semi-Attended transfer: The party to whom you want to transfer the call does not answer their phone before you transfer the call (when you hear ring-back tone).

Attended transfer: The party to whom you want to transfer the call answers their phone before you transfer the call. You can consult with them before completing the transfer.



3.15.1. Blind Transfer

To do Blind transfer:

1. During an active call, press the **Transfer** () hot key.
2. The active call is placed on hold, and an entry screen is displayed for the number you want to transfer to.
3. Press the **Transfer** () hot key to complete the blind transfer.



3.15.2. Semi-Attended Transfer

  To do Semi-Attended transfer:

1. During an active call, press the **Transfer** () hot key.
2. The active call is placed on hold, and an entry screen is displayed for the number you want to transfer to.
3. Press **Navigation OK** or “**Dial**” soft-key to transfer the call to the number you want to transfer to.
4. Wait until you hear a ringback tone, then press the **Transfer** () hot key to complete the semi-attended transfer.

3.15.3. Attended Transfer

  To do Attended transfer:

1. During an active call, press the **Transfer** () hot key.
2. The active call is placed on hold, and an entry screen is displayed for the number you want to transfer to.
3. Press **Navigation OK** or “**Dial**” soft-key to transfer the call to the number you want to transfer to.
4. Wait until the call is picked up, then press the **Transfer**() hot key to complete the attended transfer.

Note: sometimes, you may place more than 2 calls on your phone, select and press the **Line** key to choose the call you want to do transfer first, and then do transfer.

3.16. Forwarding a Call

Forwarding your incoming call to another party is sometimes called as static forwarding. You can also dynamically forward calls while your phone is ringing.

Call Forward can be configured either on phone mode or on line mode. When it is on phone mode, its settings are applied for all lines. When it is on line mode, you should configure each line one by one.

There are four types of static forwarding. For more information on how to setup static call forwarding, please refer to the 2.2.3 Call Forward.


- Always Forward
- Busy Forward
- No Answer Forward
- DND Forward

To use dynamic forwarding:

1. When the phone rings with an incoming call, press the “**Fwd**” soft-key.
2. Enter a number to forward the incoming call to.
3. Press **OK** soft-key to forward the call.

3.17. Using Voice Mail

Your voicemail can be saved either on your local phone or on hosted SIP service server depends on phone and server configuration. When you phone got new voice mail(s), it is

indicated by a flashing message waiting indicator (MWI) LED on the front of the phone and an icon() shown on display.


- To access local voicemail, please follow the steps below.
 1. Input your mailbox ID, the default ID is “117”, and then press **Dial** soft-key to dial out and enter local Mailbox.
 2. The IVR will ask you to enter your mailbox PIN Code.
 3. Input your PIN CODE, the default code is “1234”.
 4. Follow the interactive voice response (IVR) instructions to access voice mail messages.

Mailbox ID and PIN CODE are allowed to be changed. Please follow the steps below to do.

1. Press “**Menu**”.
2. Select **Settings > Basic Settings > Local Voicemail > Mailbox ID/ PIN Code**.

Note:

1. The maxima recording duration per message is 25(s).
2. The maxima quantity of messages is 52.

- To access server based voicemail, please follow the steps below.
 1. Press the **Message** () hot key to enter VM Messages.
 2. Select a line that you want to access, and then press OK key to confirm and dial out the access code.
 3. Follow the interactive voice response (IVR) instructions to access voice mail messages.

Server based voicemail is an optional feature configured on a hosted SIP service or IP PBX and may not be supported on your particular system. To use server based voicemail on the phone, some settings need to be configured first. For more information, please contact your administrator or Service Provider support center.

3.18.Placing a Speed Dial Call

To make a speed dial call, you can use either one of the following two methods.

- Make a call from the speed dial list.
 1. Pickup the handset, or press a line key, or press the speaker key or press the headset key.
 2. When you hear dial tone, dial the one digit (0-9) speed dial key you previously configured.

3. Press “**OK**” or the “**Dial**” soft-key and the phone will look up the key in the speed dial table, find the matching item and dial the number assigned to the speed dial key.


- Make a call from the “Speed Dial” programmable key.

1. Press the programmable key to dial out the configured number directly.


3.19.Using Multiple Lines

The phone can support up to three lines configured for the same or different service providers or servers. It allows you to make up to three concurrent calls.


For example, the following screen shows you line1001 has one active call with number3001.

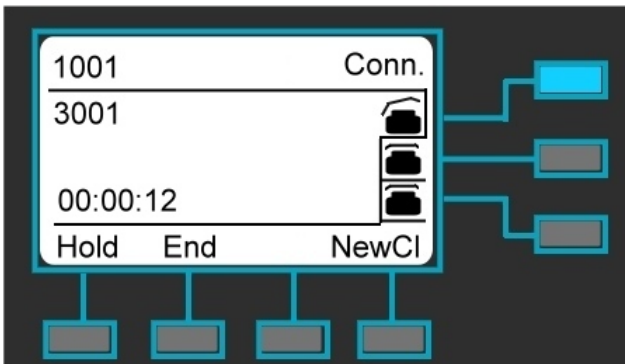


You can make a new call by using another line, 1002. Press the **Line Key** button, 1002, on the right hand side of the LCD, and then make a call to number 3002.

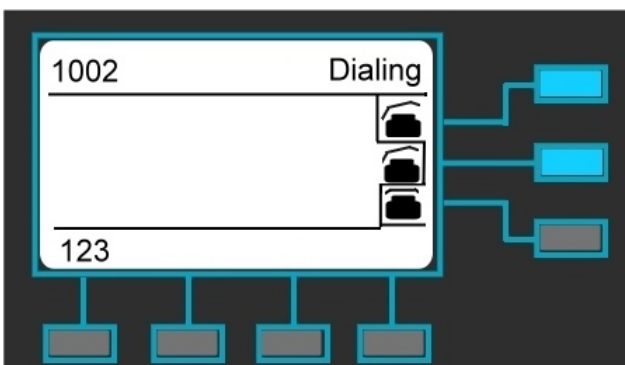

After the called party answers the call, the following screen shows you line1001 has one held call with number3001, and line1002 has one active call with number3002.

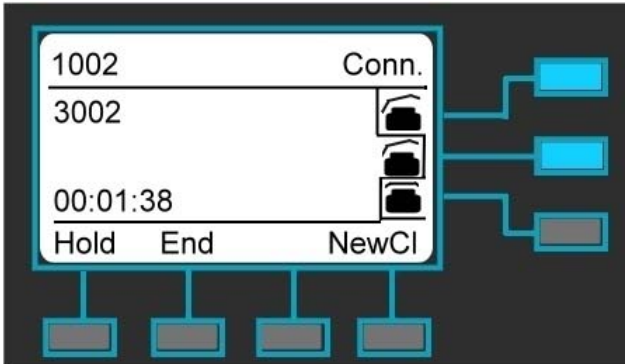

 To switch between the two lines, press the **Line Key** (1001) button on the right hand side of the LCD, which calls to number 3001 to unhold the call.

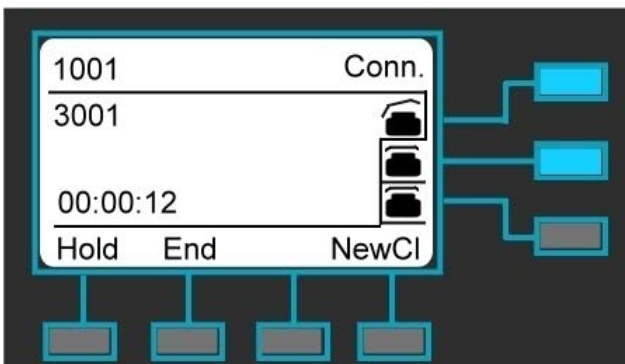


By the steps as above, you can make up to three concurrent calls.


3.20. Using Multiple Calls

Each line of service in the phone can support up to two calls simultaneously. It allows you to place one caller on hold and talk to the other person in another call on the same line.


For example, the following screen shows you line 1001 has one active call with number 3001.

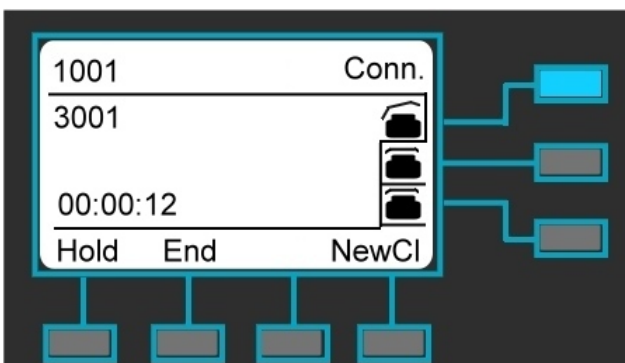

You can make a new call on the same line, just press **NewCI** soft-key to call another party.

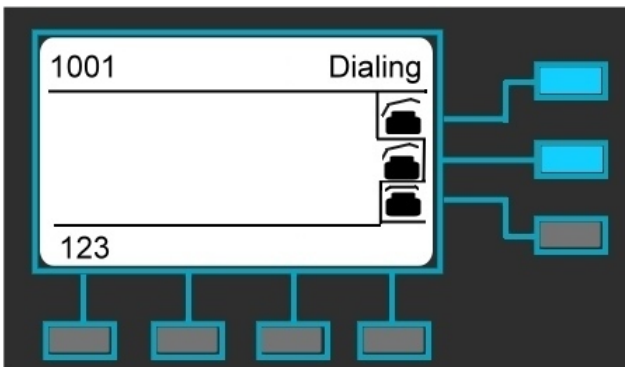

After the called party answers the call, the following screen shows you line1001 has two calls, the call to number3001 is on hold, and the call to number 3002 is active.

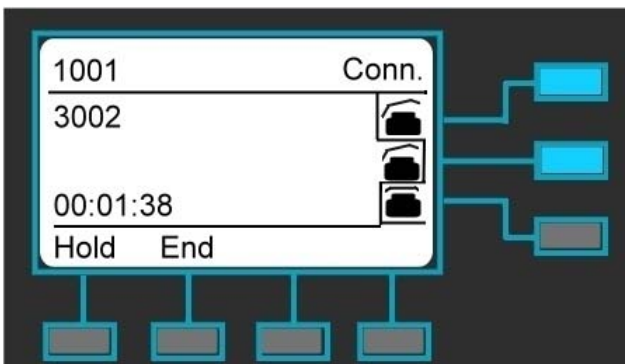


By the steps as above, you can use one line to make 2 calls simultaneously.

3.21.Using Text Message

The IP3022 phone supports two types of text messages, SIMPLE and XMPP. Both are required server to support. Contact your system administrator for more information.

 When you phone got new text message(s), it will ring and pop up a new message window and an icon(📞) on display.

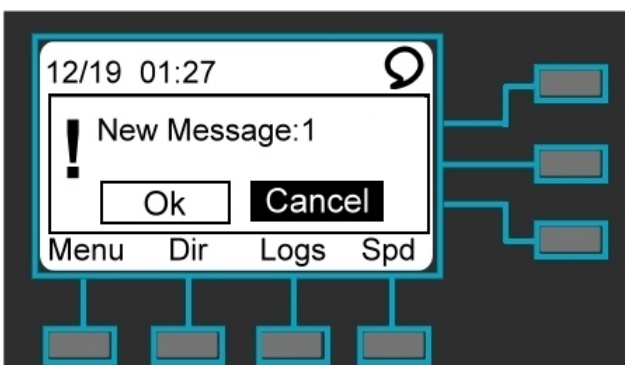

1. Move the cursor to “Ok”, and then press the **OK** key to enter Inbox page.
2. Choose one, and then press the **OK** key to view message.

3.22.Using XML Browser

The IP3022 phone supports XML browser to allow user to access information from server through the display. It is required server to support. Contact your system administrator for more information.

To enter XML Browser menu:

1. Press the “**Menu**” soft-key below the LCD screen.
2. Select “**XML Browser**” in the main menu.


4. Using Web Configuration

Most of user functions are able to be configured from the IP3022 LCD menu. However, there are still some features that need to be configured using the phone's web user interface. This chapter provides instructions on how to use the phone web configuration page.

4.1. Login Web UI

To use your web browser to configure the IP3022 phone, you need to know the IP address of the phone on your local area network (LAN). Using the LCD menu, find the IP address of the phone by pressing the **OK** key when phone is in idle mode.

1. Point your web browser to the IP address of the phone.
2. Enter the correct Username and Password information into the dialog box and press **OK**.

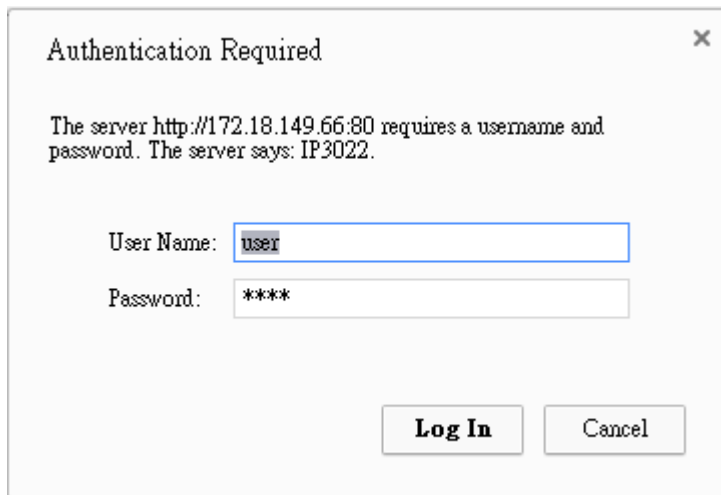

Note: The default Username is “**user**” and the default Password is “**1111**” and the default network settings are:

Default IP address:	192.168.1.10
Default Subnet mask:	255.255.255.0
Default Gateway:	192.168.1.1
Default DNS:	8.8.8.8

4.2. Changing the User's Password

Some features of the phone require you to enter a personal identification number (PIN) for security. The default PIN of the User account is “1111”.

To change the User password:

1. Navigate to the **System** tab.
2. Locate User Settings > User Password:.
3. Change the password to use a new PIN.

4.3. Viewing Phone Information on Web User Interface

Information is the first page you will see when you login to the phone's web user interface. This page lets you check the status of the SOHO IP Deskphone including network and product related information as well as account status information.

MOCET IP3022 Configuration			
Information Phone SIP System EDM Phonebook			
Network Information?	Network Type: DHCP Subnet Mask: 255.255.252.0 Primary DNS: 192.168.2.7 Link Mode: Wire	Current IP: 172.18.149.66 Default Gateway: 172.18.151.1 Secondary DNS: 172.18.151.5	
Product Information?	Product Name: IP3022 Firmware Version: IP3022_F_5_4_V1.1.9_2014-09-30 SN: T4H00016 MAC Address: 00:19:15:DC:52:A3 Available Flash: 5340 KBytes	Application Version: F_5_4_1.1.9 Hardware Version: IP3022_PR	
Line 1 Status	Phone Number: 3904 SIP Proxy Server: mocetpbx.no-ip.org	Registration State: Registered	
Line 2 Status	Phone Number: 3907 SIP Proxy Server: mocetpbx.no-ip.org	Registration State: Registered	
Line 3 Status	Phone Number: 3908 SIP Proxy Server: mocetpbx.no-ip.org	Registration State: Registered	

For SIP Line status:

- When this line is disabled, the line status will not be displayed.
- “Registration State” will be marked “Registered” with green text.
- “Unregistered” will be marked with red text.

5. Phone Firmware Upgrade

The IP3022 phone supports several different ways to update its firmware (please refer to the table below). This is for system administrators or service providers. End users normally do not have to upgrade firmware by themselves. Please contact your Administrator or service provider for assistance.

No.	Firmware Upgrade Method	Method Description	User	Admin.	Dist.
1	Upgrade using web browser on a specified computer	Download SW Update Pack from PC that Dual Kernel Image and Upgradable Applications are supported.	✗	✓	✓
2	Auto-Provision upgrade with MOCET Auto-Provisioning System (APS)	Firmware upgrade via TFTP/HTTP/HTTPS mass provisioning by using MOCET APS protocol with encrypted XML configuration file.	✗	✓	✓
3	Engineering key sequences on boot	1. Download complete flash image by U-boot at system reboot. 2. Download SW Update Pack from TFTP server. 3. Download SW Update Pack from USB dongle.	✗	✗	✓
4	Emergency Upgrade	Auto-detect (when the image checksum is wrong) and download complete flash image from TFTP server at fixed IP address.	✗	✗	✓

6. Troubleshooting

Symptom	Check & Remedy
No operation	<ul style="list-style-type: none">• Check if the power adapter is properly connected.• Check if the Ethernet cable is properly connected.
No dial tone	<ul style="list-style-type: none">• Check if the handset cord is properly connected.• Check if the power adapter is properly connected.
LAN connection lost status message	<ul style="list-style-type: none">• Check if the Ethernet cable is properly connected.
Cannot make call	<ul style="list-style-type: none">• Check the status of your SIP registration status or contact your administrator, supplier or ITSP for more information or assistance.
Cannot receive a call	<ul style="list-style-type: none">• Check if the Ethernet cable is properly connected.• Check the status of your SIP registration status, or contact your administrator, Distributor (dealer) or ITSP for more information or assistance.
One way voice	<ul style="list-style-type: none">• Usually this is related to NAT transversal issue. Please contact your network vendor or service provider.
Cannot connect to the phone configuration pages with a browser	<ul style="list-style-type: none">• Check if the Ethernet cable is properly connected.• Check the IP address of the phone.• Check if your firewall/NAT settings is correct.

7. Glossary

7.1. Acronyms

ANC	Anonymous Call
APS	Auto-Provisioning Server
B2BUA	Back to Back User Agent
CA	Certificate Authority
CID	Caller ID
CODEC	Coder and Decoder of Voice
CNG	Comfort Noise Generation
CPC	Calling Party Control
CPE	Customer Premises Equipment
CWCID	Call Waiting Caller ID
CWI	Call Waiting Indication
CWT	Call Waiting Tone
DHCP	Dynamic Host Configuration Protocol
DNS	Domain Name Server
DTMF	Dual Tone Multiple Frequency
ETSI	European Telecommunication Standard
FQDN	Fully Qualified Domain Name
FSK	Frequency Shift Keying
HTML	Hypertext Markup Language
HTTP	Hypertext Transfer Protocol
ICMP	Internet Control Message Protocol
IETF	Internet Engineering Task Force
IP	Internet Protocol
ISP	Internet Service Provider
ITSP	IP Telephony Service Provider
IVR	Interactive Voice Response
LAN	Local Area Network
LBR	Low Bit Rate
LBRC	Low Bit Rate Codec
MWI	Message Waiting Indication
PoE	Power over Ethernet (IEEE802.3af standard)
PPPoE	Point-to-point protocol over Ethernet (mainly for xDSL modem connection)
PSTN	Public Switched Telephone Network
NAT	Network Address Translation
NTP	Network Time Protocol
RTP	Real Time Protocol
RTCP	Real Time Control Protocol
SDP	Session Description Protocol
SIP	Session Initiation Protocol
TFTP	Trivial File Transfer Protocol
TCP	Transmission Control Protocol
UDP	User Datagram Protocol
URL	Uniform Resource Locator
VLAN	Virtual Local Area Network
WAN	Wide Area Network
XDSL	Digital Subscriber Loop, such as ADSL, VDSL, HDSL, etc.,....
XML	Extensible Markup Language

7.2. Terminology

10/100BASE-T	It is a LAN transmission line specification stipulated by IEEE. Transmission speed is 10 or 100 Mbps and the modulation technique is base-band modulation. The cable uses unshielded twisted pair, similar to a telephone wire. 10BaseT is an IEEE standard (802.3) for operating 10 Mbps Ethernet networks (LANs) with twisted pair cabling and a wiring hub.
802.1p	An IEEE standard for providing QoS using three bits (defined in 802.1q) to allow switches to reorder packets based on priority level.
802.1q	An IEEE standard for providing virtual LAN (VLAN) identification and QoS levels. Three bits are used to allow eight priority levels, and 12 bits are used to identify up to 4,096 VLANs.
AGC	Automatic Gain Control is a feature of IP solutions units that allows the units to automatically adjust the incoming voice signal to a user defined level in dBm.
A-law	The PCM coding and compression standard used in Europe and in areas outside of North America influence. A Law Encoding is the method of encoding sampled audio waveforms used in 2.048Mbps, 30 channel PCM primary system known as E-carrier.
Auto answer	In telephone call control: The capability of a machine to answer a ringing telephone without human intervention.
Autodial	In telephone call control: An auxiliary device for a telephone that automatically dials any of a group of prerecorded telephone numbers.
Blocked Calls	Caused by an insufficient network facility that does not have enough lines to allow calls to reach a given destination. May also pertain to a call from an originating number that is blocked by the receiving telephone number.
Call Completion	The point at which a dialed number is answered.
Call Termination	The point at which a call is disconnected.
CDR	In telephone call control: Call Detail Record for billing
IP Centrex	This service is offered by the LEC to the end user. The feature-rich Centrex line offers the same features and benefits as a PBX to a customer without the capital investment or maintenance charges. The LEC charges a monthly fee to the customer, who must agree to sign a term agreement. And the above service is thru VoIP called IP centrex.
CO	Switching center for the local exchange carrier.
CODEC	The CODEC (CODER/DECODER) is a standard through which voice information can be encoded into data or decoded back to voice information. Both a Coder and Decoder are necessary on both sides of the telephone call since telephone calls occur simultaneously in both directions. Bandwidth is an extremely important factor in QOS (Quality of Service). MOS (Mean Opinion Score) is an attempt to make a quantifiable benchmark of voice quality. Below are examples of the CODEC, bit rate and mean opinion score: G.711 (toll quality) 64K MOS=4.1, G.726 16K (32K) MOS =3.8, G.729AB (cell phone quality) 8K MOS=3.7.

Customer Premise Equipment	The only part of the telecommunications system that the customer comes into direct contact with. Example of such pieces of equipment are: telephones, key systems, PBXs, voicemail systems and call accounting systems as well as wiring telephone jacks. The standard for this equipment is set by the FCC, and the equipment is supplied by an interconnect company.
DHCP	A utility that enables a server to dynamically assign IP addresses from a predefined list and limit their time of use so that they can be reassigned. Without DHCP, an IT Manager would have to manually enter in all the IP addresses of all the computers on the network. When DHCP is used, whenever a computer logs onto the network, it automatically gets an IP address assigned to it.
DID	Direct Inward Dialing: The ability to make a telephone call directly into an internal extension without having to go through the operator.
Diff-Serv	Differentiated Services : The Diff-Serv model divides traffic into a small number of classes to provide quality of service (QoS). One of QoS in internet
Direct inward dialing	A Centrex feature that allows an outside caller to dial a central business number, as well as an extension number.
Diversity antenna	A type of antenna system that uses two antennas to maximize reception and transmission quality and reduce interference.
DNS	Domain Name Service : A server/program that translates URLs to IP addresses by accessing a database maintained on a collection of Internet servers. The program works behind the scenes to facilitate surfing the Web with alpha versus numeric addresses. A DNS server converts a name like mywebsite.com to a series of numbers like 107.22.55.26. Every website has its own specific IP address on the Internet. Typically one or more DNS servers is located in an IP network.
DSL	Various technology protocols for high-speed data, voice and video transmission over ordinary twisted-pair copper POTS (Plain Old Telephone Service) telephone wires.
DSP	Digital Signal Processors (DSP) standardize the different states of a digital signal into an organized and understandable signal. DSP circuits can differentiate between digital signals and digital noise. Signal-to-Noise ratio is one of the most important factors in telephony voice communication because if there is too much noise in a signal, the DSP will be unable to find a signal standard and lose it. DSP circuits always adjust digital signal levels so the can maintain a standard without noise.
DTMF	Dual Tone Multi-Frequency: The type of audio signals generated when you press the buttons on a touch-tone telephone. Can be used in inbound(after voice channel connected) and outbound(before voice channel connected) application.
Ethernet	International standard networking technology for wired implementations. Basic 10BaseT networks offer a bandwidth of about 10 Mbps. Fast Ethernet (100 Mbps) and Gigabit Ethernet (1000 Mbps) are becoming popular.
G.711	64 kbps PCM half-duplex codec (high quality, high bandwidth, minimum processor load)

G.723.1	6.4/5.3 kbps MP-MLQ codec (low quality, low bandwidth, high processor load due to the compression)
G.726	40/32/24/16 ADPCM codec (good quality, medium bandwidth, low processor load)
G.729	8 kbps ACELP codec (medium quality, low bandwidth, high processor load)
IEEE	Institute of Electrical and Electronics Engineers, New York, www.ieee.org . A membership organization that includes engineers, scientists and students in electronics and allied fields. It has more than 300,000 members. The IEEE is an international organization that develops standards for hundreds of electronic and electrical technologies for computers and communications. The organization uses a series of numbers, like the Dewey Decimal system in libraries, to differentiate between the various technology families.
IP (Internet Protocol)	Internet Protocol is located at 3rd layer of ISO network model. A set of rules used to send and receive messages at the Internet address level. IP protocol is widely used in Internet and LAN networks. The purpose is to deliver data between computing equipment over the network. The protocol is generally effective but does not guarantee complete and accurate data communications.
IP address	A 32-bit number that identifies each sender or receiver of information that is sent across the Internet. An IP address has two parts: an identifier of a particular network on the Internet and an identifier of the particular device (which can be a server or a workstation) within that network. A number used to identify the location of a host device. It is expressed in numeric dot notation (e.g. 202.203.27.31).
IP Centrex	This service is offered by the LEC to the end user. The feature-rich Centrex line offers the same features and benefits as a PBX to a customer without the capital investment or maintenance charges. The LEC charges a monthly fee to the customer, who must agree to sign a term agreement. And the above service is thru VoIP called IP centrex.
Jitter	Jitter refers to fluctuations in transmission delay time. In the case of voice data, conversations are packaged into packets (IP packetization) and transmitted. Individual packets can take different routes through the varied networks that comprise the Internet. When the time interval for the arrival of the packets is not constant the timing fluctuations that may occur are referred to as "jitter".
MAC	Medium Access Controller (MAC) : The IEEE 802.11 Standard encompasses the physical layer (PHY) and the lower portion of the data link layer. The lower portion of the data link layer is often referred to as the Medium Access Controller (MAC) sublayer. Every wireless 802.11 device has its own specific MAC address hard-coded into it. This unique identifier can be used to provide security for wireless networks. When a network uses a MAC table, only the 802.11 radios that have had their MAC addresses added to that network's MAC table will be able to get onto the network.

NAT	Network Address Translation: A network capability that enables a houseful of computers to dynamically share a single incoming IP address from a dial-up, cable or xDSL connection. NAT takes the single incoming IP address and creates new IP address for each client computer on the network.
Numbering plan	In a communications network, a numbering plan allocates specific numeric codes to identify each subscriber line, special lines, trunk lines, etc. Numbering plans can be divided into the numbering system and number assignments. The numbering system indicates the number of digits to be assigned and the basic scheme of number assignment. The assignment of specific codes is performed according to the numbering system.
PBX	Private Branch Exchange: An in-house telephone switching system that interconnects telephone extensions to each other as well as to the outside telephone network.
Peer-to-peer network	A wireless or wired computer network that has no server or central hub or router. All the networked PCs are equally able to act as a network server or client, and each client computer can talk to all the other wireless computers without having to go through an access point or hub. However, since there is no central base station to monitor traffic or provide Internet access, the various signals can collide with each other, reducing overall performance.
POTS	Plain Old Telephone Service (POTS), or Pretty Old Telephone System is the standard analog traditional telephone service that most homes use. In contrast, telephone services based on high-speed, digital communications, such as ISDN and DSL, are not POTS. The main distinctions between POTS and non-POTS services are speed and bandwidth.
Proxy server	Used in larger companies and organizations to improve network operations and security, a proxy server is able to prevent direct communication between two or more networks. The proxy server forwards allowable data requests to remote servers and/or responds to data requests directly from stored remote server data.
PSTN	Public Switched Telephone Network: The worldwide voice telephone network.
QoS	Quality of service (QoS)
RJ-45	Standard connectors used in Ethernet networks. Even though they look very similar to standard RJ-11 telephone connectors, RJ-45 connectors can have up to eight wires, whereas telephone connectors have only four.
Router	A device that forwards data packets from one local area network (LAN) or wide area network (WAN) to another. Based on routing tables and routing protocols, routers can read the network address in each transmitted frame and make a decision on how to send it via the most efficient route based on traffic load, line costs, speed, bad connections, etc.

RTP/RTCP	Real-Time Protocol/Real-Time Control Protocol(RTP / RTCP) : IETF specifications for audio and video signal management. Allows applications to synchronize and spool audio and video information. RTP (Real Time Protocol) is specifically concerned with the dependable transmission of latency-sensitive traffic across the network and is involved in using time stamping to determine network jitter tolerance and makes sure that voice packets are arriving in order.
SIP	Session Initiation Protocol: A protocol that provides telephony services similar to H.323, but is less complex and uses less resources. SIP (Session Initiation Protocol) is a signaling protocol for Internet conferencing, telephony, presence, events notification and instant messaging. SIP is a text-based protocol, similar to HTTP and SMTP, for initiating interactive communication sessions between users.
Subnetwork or Subnet	Found in larger networks, these smaller networks are used to simplify addressing between numerous computers. Subnets connect to the central network through a router, hub or gateway. Each individual wireless LAN will probably use the same subnet for all the local computers it talks to.
TCP/IP	Internet Standard Protocol: The underlying technology behind the Internet and communications between computers in a network. The first part, TCP, is the transport part, which matches the size of the messages on either end and guarantees that the correct message has been received. The IP part is the user's computer address on a network. Every computer in a TCP/IP network has its own IP address that is either dynamically assigned at startup or permanently assigned. All TCP/IP messages contain the address of the destination network as well as the address of the destination station. This enables TCP/IP messages to be transmitted to multiple networks (subnets) within an organization or worldwide.
TOS	Type of Service: A method of setting precedence for a particular type of traffic for QoS.
UDP	User Datagram Protocol. An unreliable networking layer that sits at the same level of the networking stack as TCP. UDP is a connectionless transport protocol that is part of a suite of protocols (the others being RTP and IP) that allow for the timely and efficient transfer of voice data across an IP network. UDP is the better transport protocol for VoIP data than TCP.
VAD	Voice Activity Detection (VAD) helps save bandwidth during calls. Examples: When you are making a VoIP call and you are not speaking and you are listening, that silence is still taking up bandwidth during the call. When silence is detected by VAD software over a predetermined length of time, it sends silent packets that inform other VAD enabled systems to stop holding the bandwidth for these empty packets.

VoIP	Voice Over Internet Protocol: VoIP is based on the principal of transmitting digitized voice packets over networks. Basically, VoIP consists of converting voice signals into streams of digital packets and sending those packets of data through an IP-constructed network environment. VoIP can work in both LAN (local area network) and WAN (wide area network) environments for intranetwork or internetwork communication between VoIP channel users. Routers and switches and other special compression protocols direct the packetized voice data to their destination IP address. VoIP can be less expensive than voice transmission using standard analog packets over POTS (Plain Old Telephone Service). It allows telephone calls, faxes, or overhead paging to be transported over an existing IP data network topology.
VPN	Virtual Private Network(VPN) is a virtual created sub-network based on a public real network. A type of technology designed to increase the security of information transferred over the Internet. VPN can work with either wired or wireless networks, as well as with dial-up connections over POTS. VPN creates a private encrypted tunnel from the end user's computer, through the local wireless network, through the Internet, all the way to the corporate servers and database.
WAN	Wide Area Network: For global or long distance networking access thru the support of telecommunication devices. A communication system of connecting PCs and other computing devices across a large local, regional, national or international geographic area. Also used to distinguish between phone-based data networks and Wi-Fi. Phone networks are considered WANs and Wi-Fi networks are considered Wireless Local Area Networks (WLANs).
WLAN	Also referred to as LAN. A type of local-area network that uses high-frequency radio waves rather than wires to communicate between nodes.

===== The End of Document =====